

Large Size Vacuum Module:

Series ZR

Ejector System/Vacuum Pump System

- Large suction flow rate, suitable when used with large size pads or multiple pads.
- Nozzle dia. $\phi 1.0$, $\phi 1.3$, $\phi 1.5$, $\phi 1.8$, $\phi 2.0$
- Vacuum module suitable for handling workpieces of 0.5 to 5 kg.



ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

HEP


Related
Equipment

Large Size Vacuum Module: Ejector System/Vacuum Pump System Series ZR


Vacuum module suitable for handling workpieces of 0.5 to 5 kg.

- **Modular design**/Customized application function through selection of modular components.
- **Modules for use with external vacuum supply** (from pump or mainline) or as an air driven ejector system.
- **Safe** — Vacuum self-holding function by means of double solenoid valves.
- **Compact, Lightweight**
- **Manifolding possible**

Vacuum ejector type complete unit

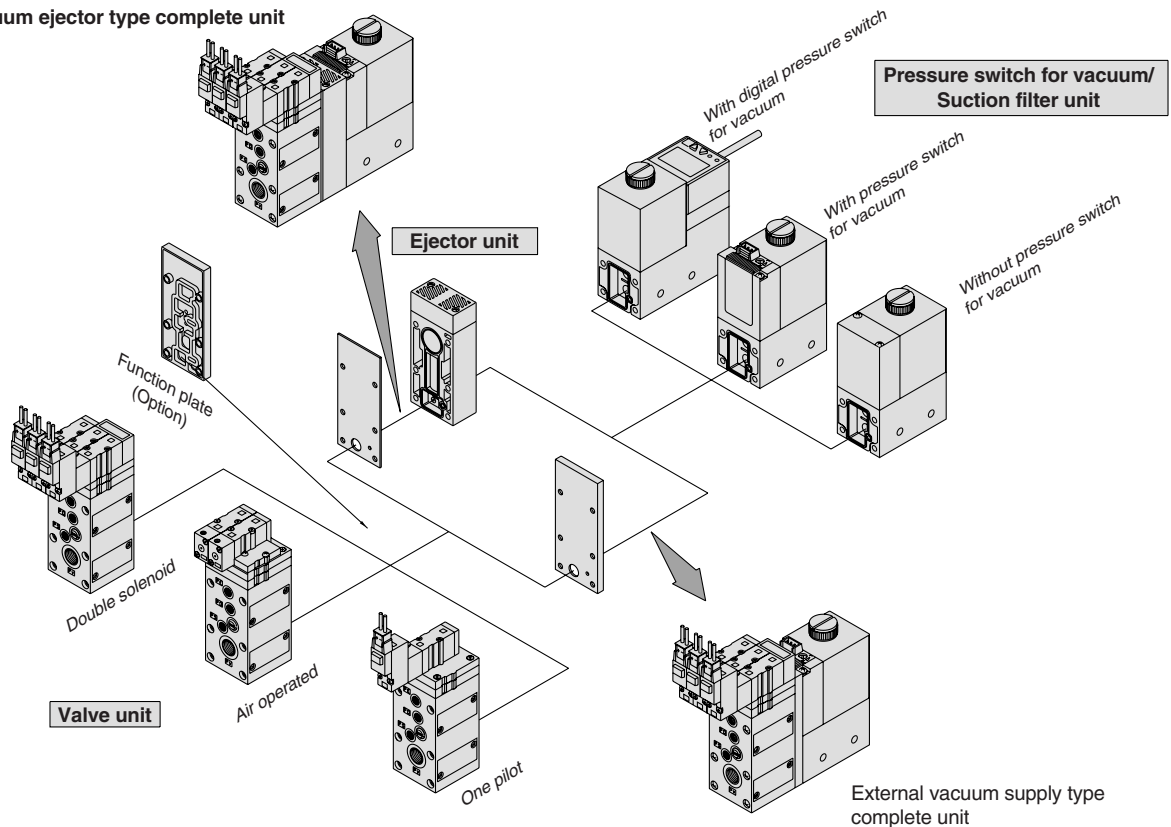



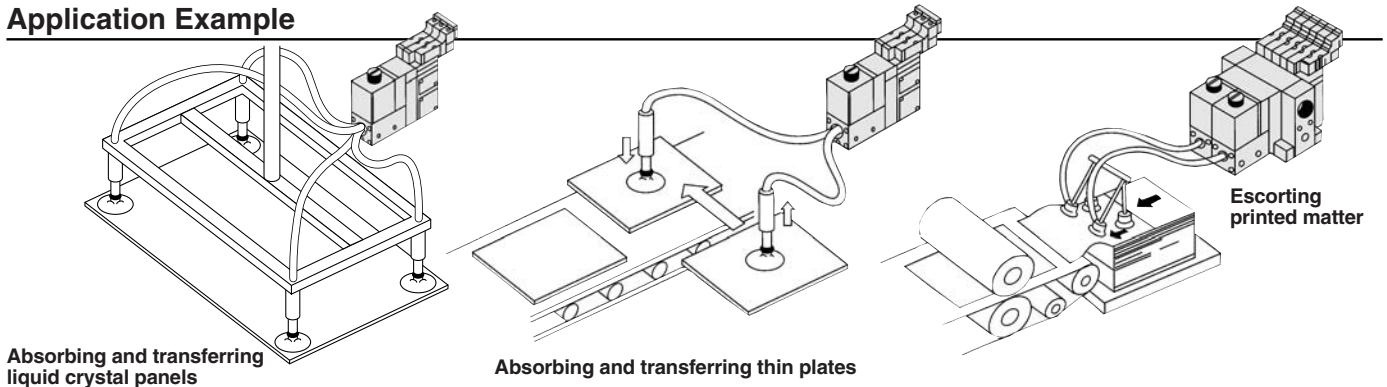

Application Example




Absorbing and transferring copper plates, Automatic labeling machine, Absorbing and transferring veneers, Automatic screw fastening machine

Modular Components Introduction

System		Ejector System	Vacuum Pump System																				
Component equipment	Characteristics	P. 940 to 967																					
Ejector unit ZR1-W	 Nozzle dia. (mm) Maximum suction flow rate (ℓ/min. (ANR)) Air consumption (ℓ/min (ANR)) Maximum vacuum pressure Exhaust release (Ejector exhaust)	<table border="1"> <tr> <td>1.0</td> <td>1.3</td> <td>1.5</td> <td>1.8</td> <td>2.0</td> </tr> <tr> <td>22</td> <td>38</td> <td>54</td> <td>62</td> <td>84</td> </tr> <tr> <td>42</td> <td>52</td> <td>74</td> <td>88</td> <td>105</td> </tr> <tr> <td>46</td> <td>78</td> <td>95</td> <td>150</td> <td>185</td> </tr> </table> S: -84 kPa L: -53 kPa Built-in silencer, Manifold exhaust Individual exhaust port	1.0	1.3	1.5	1.8	2.0	22	38	54	62	84	42	52	74	88	105	46	78	95	150	185	P. 968 to 983
1.0	1.3	1.5	1.8	2.0																			
22	38	54	62	84																			
42	52	74	88	105																			
46	78	95	150	185																			
Valve unit ZR1-V	 Component equipment Function Operation Power supply voltage	Supply valve (Pilot type)/Release valve (Pilot type) N.C./N.O. Solenoid valve (Double, Single)/Air operated valve 3, 5, 6, 12, 24 VDC, 100, 110 VAC (50/60Hz)																					
Pressure switch for vacuum ZSE2-0R-15 ZSE30A-00-□-□□□-X505	 Set pressure range Hysteresis Operating voltage	-101 to 0 kPa/-101 to 10 kPa 3% or less/variable 12 to 24 VDC (Ripple ±10% or less)																					
Suction filter unit ZR1-F	 Operating pressure range Filtration degree Material	Vacuum to 100 kPa 30μm PVF																					
Function plate ZR1-RV	<table border="1"> <tr> <td rowspan="3">Symbol</td> <td>RV1</td> </tr> <tr> <td>RV2</td> </tr> <tr> <td>RV3</td> </tr> </table>	Symbol	RV1	RV2	RV3	Air pressure supply port(PV)↔Pilot pressure supply port(PS)↔Release pressure supply port(PD) Air pressure supply port(PV)↔Pilot pressure supply port(PS) / Release pressure supply port(PD) Air pressure supply port(PV) / Pilot pressure supply port(PS)↔Release pressure supply port(PD)																	
Symbol	RV1																						
	RV2																						
	RV3																						
Common specifications	<table border="1"> <tr> <td rowspan="2">Unit</td> <td>Air supply port</td> <td>Rc 1/8</td> </tr> <tr> <td>Vacuum pad connection port</td> <td>Rc 1/8</td> </tr> <tr> <td rowspan="5">Manifold</td> <td>Air supply port</td> <td>Rc 1/8</td> </tr> <tr> <td>Pilot valve connection port</td> <td>M5</td> </tr> <tr> <td>Release valve connection port</td> <td>M5</td> </tr> <tr> <td>Common exhaust port</td> <td>Rc 1/2</td> </tr> <tr> <td>External vacuum supply port</td> <td>Rc 1/8</td> </tr> </table>	Unit	Air supply port	Rc 1/8	Vacuum pad connection port	Rc 1/8	Manifold	Air supply port	Rc 1/8	Pilot valve connection port	M5	Release valve connection port	M5	Common exhaust port	Rc 1/2	External vacuum supply port	Rc 1/8	<table border="1"> <tr> <td>—</td> <td>Rc 1/8</td> </tr> </table>		—	Rc 1/8		
Unit	Air supply port		Rc 1/8																				
	Vacuum pad connection port	Rc 1/8																					
Manifold	Air supply port	Rc 1/8																					
	Pilot valve connection port	M5																					
	Release valve connection port	M5																					
	Common exhaust port	Rc 1/2																					
	External vacuum supply port	Rc 1/8																					
—	Rc 1/8																						

Refer to pages 945 to 954 for further specifications of each unit.

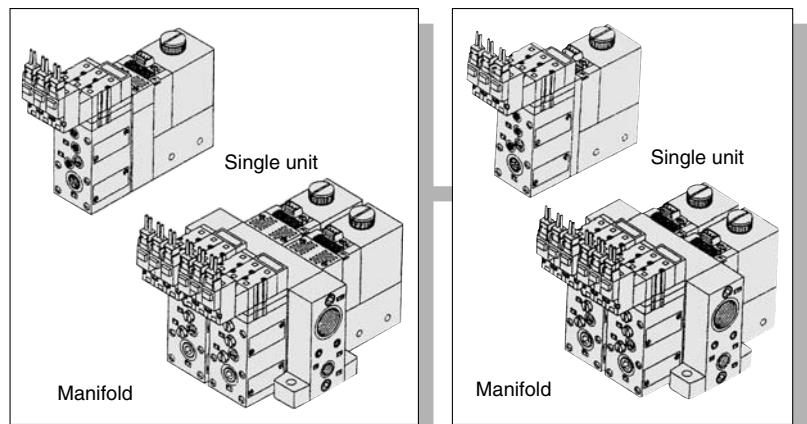

- ZA
- ZX
- ZR**
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment


Large Size Vacuum Module: Ejector System Series ZR



How to Order

Note for model selection
Take function plates into consideration. (Refer to page 943.)

Components

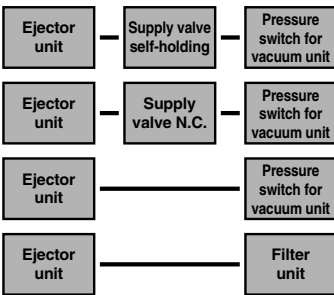

Ejector module nozzle diameter

10	1.0 mm	18	1.8 mm
13	1.3 mm	20	2.0 mm
15	1.5 mm		

Maximum vacuum pressure

S	-84 kPa
L	-53 kPa

Ejector exhaust

Symbol	Type	Valve	Manifold
1	Built-in silencer	●	●
2 <small>Note 1)</small>	Port exhaust	●	●
3 <small>Note 2)</small>	Common exhaust	—	●

Note 1) When port exhaust is applied to the manifold, pilot exhaust is done by common exhaust. Thus, the exhaust port on the manifold base should be open while operating.

Note 2) When the product is used for the manifold specification and common exhaust, the exhaust air of the operating ejector releases may enter the vacuum (V) port of the non-operating ejector and be released if there are an operating and non-operating ejector. Select either the built-in silencer or port exhaust for the ejector exhaust method.

Combination of supply valve and release valve
Refer to "Table (1)" on page 941 for details.

Electrical entry

Nil	DC: 1 W (With indicator light: 1.05 W) AC
Y*	DC: 0.45 W (With indicator light: 0.5 W)

* Only 24 VDC and 12 VDC are applicable to 0.45 W.

Solenoid valve rated voltage

Nil	Air operated
5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC
D1 <small>Note)</small>	100 VAC (50/60 Hz)
D2 <small>Note)</small>	110 VAC (50/60 Hz)

Note) CE marked products are not available for "D1" and "D2".

Caution

When using AC, the DC solenoids are operated via a rectifier. Therefore, make sure to combine the connector assembly equipped with a rectifier with the exclusive solenoids. Using other combinations could lead to burned coils or other malfunctions.

Light/Surge voltage suppressor

Nil	None
Z	With light/surge voltage suppressor
S	With surge voltage suppressor

* S is not available for AC. DC voltage (with surge voltage suppressor) If the polarity is incorrect at DC (surge voltage suppressor), diode or switching element may be damaged.

Electrical entry

Nil	Air operated
For 24, 12, 6, 5, 3 VDC	
L	Lead wire length 0.3 m
LN	Without lead wire (Applicable to only DC)
LO	Without connector
M	Lead wire length 0.3 m
MN	Without lead wire (Applicable to only DC)
MO	Without connector
G	Grommet type Lead wire length 0.3 m (Applicable to only DC)
H	Lead wire length 0.6 m (Applicable to only DC)
100, 110 VAC (With rectifier)	
L	Lead wire length 0.3 m
M	Lead wire length 0.3 m


• Refer to "Table (2)" on page 941 for part no. of lead wire with connector.

Manual override

Nil	Non-locking push type
B	Slotted locking type

Combination of switch/filter

Nil	None
D	Digital pressure switch for vacuum (ZSE30A) + Filter
E	Pressure switch for vacuum (ZSE2) + Filter
F	Filter

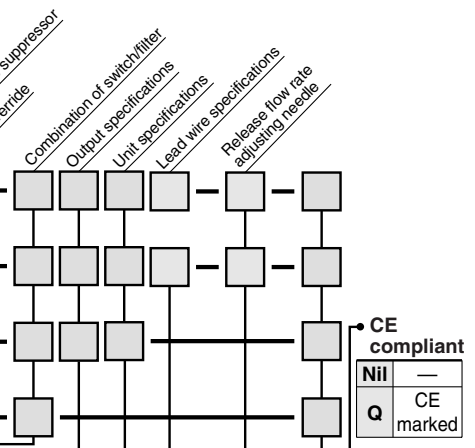

CE compliant

Nil	—
Q	CE marked

Release flow rate adjusting needle

Nil	Without lock nut
L	With lock nut

Lead wire specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

Nil	Without lead wire
L	Lead wire with connector (Length 2 m)

Refer to "Table (4)" on page 941 for part no. of lead wire with connector.

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	Grommet/Lead wire (Length 0.6 m)
L	Grommet/Lead wire (Length 3 m)
C	Lead wire with connector (Length 0.6 m)
CL	Lead wire with connector (Length 3 m)
CN	With connector/Without lead wire

Refer to "Table (3)" on page 941 for part no. of lead wire with connector.

Filter specifications (F)

Nil	No setting
-----	------------

Unit specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

Nil	With unit switching function
M	SI unit only
P	With unit switching function (Initial value psi)

Note 1) This is no longer sold for use in Japan due to the Weight and Measure Act (implemented October, 1999).

Note 2) Fixed unit: kPa

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	No setting
-----	------------

Filter specifications (F)

Nil	No setting
-----	------------

Output specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

N	NPN open collector 1 output
P	PNP open collector 1 output
A	NPN open collector 2 outputs
B	PNP open collector 2 outputs
C	NPN open collector 1 output + Analog voltage output
D	NPN open collector 1 output + Analog current output
E	PNP open collector 1 output + Analog voltage output
F	PNP open collector 1 output + Analog current output

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	NPN open collector 1 output
55	PNP open collector 1 output

Filter specifications (F)

Nil	No setting
-----	------------

Table (1) Combination of Supply Valve and Release Valve

Valve unit function			Valve unit components		Symbol	Supply valve				Release valve			
Operation stop	Vacuum adsorption	Vacuum release	Supply valve	Release valve		Solenoid valve			Air operated (VJA3130)	Solenoid valve			Air operated (VJA3130)
						Double SOL. (VJ3233-X17)	Double SOL. (VJ3233-X18)	N.C. (VJ3133)		Double SOL. (VJ3233-X17)	Double SOL. (VJ3233-X18)	N.C. (VJ3133)	
◎	◎	○	Double SOL. (VJ3233-X17)	N.C. (VJ3133)	K1	●	—	—	—	—	—	●	—
○	○	○	N.C. (VJ3133)	N.C. (VJ3133)	K2	—	—	●	—	—	—	●	—
○	○	○	Air operated (VJA3130)	Air operated (VJA3130)	K3	—	—	—	●	—	—	—	●
×	○	○	N.C. (VJ3133)		C1	—	—	●	—	—	—	(Common with supply valve)	—
×	○	○	Air operated (VJA3130)		C2	—	—	—	●	—	—	—	(Common with supply valve)
×	○	○	N.O. (VJ3133)		C3	—	—	●	—	—	—	(Common with supply valve)	—
×	◎	◎	Double SOL. (VJ3233-X18)		C4	—	●	—	—	—	(Common with supply valve)	—	—
<small>◎ : Possible ○ : Possible with limitations (without self-holding function) × : Not possible</small>					Nil	Without valve module							

Table (2) How to Order Valve Plug Connector Assembly

DC	VJ10 - 20 - 4A - □
100 VAC (with rectifier)	VJ10 - 36 - 1A - □
110 VAC (with rectifier)	VJ10 - 36 - 3A - □

Lead wire length	
Nil	300 mm (Standard)
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm

How to order

When requiring a vacuum unit equipped with valves with lead wires of 600 mm or more, specify the vacuum module valves without the standard connectors and order the required connector ass'y separately.

Example) ZR120S1-K15M□Z-EC(-Q) 1 pc.
* VJ10-20-4A-6 3 pcs.

Table (3) Pressure Switch for Vacuum/Lead Wire with Connector

ZS - 10 - 5A - □

Lead wire length	
Nil	0.6 m
30	3 m
50	5 m

How to order

When requiring a vacuum switch with a lead wire of 5 m, indicate the part numbers of the vacuum unit switch without a lead wire connector and the 5 m lead wire connector separately.

Example) ZR1□□□-□□□□□-□CN(-Q) 1 pc.
* ZS-10-5A-50 1 pc.

Table (4) Digital Pressure Switch for Vacuum/Lead Wire with Connector

ZS - 38 - 3 L


Lead wire core	
3	3 cores, 1 output, 2 m (Output specifications: N, P)
4	4 cores, 2 outputs, 2 m (Output specifications: A, B, C, D, E, F)

- ZA
- ZX
- ZR**
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

Ejector System/Combination of Supply Valve and Release Valve

Combination Symbol: **K1**

Feature: Double solenoid supply valve allows for self-holding.

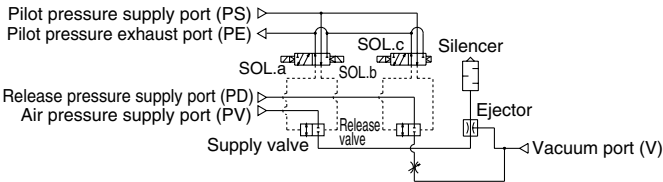


How to Operate

Operation	Pilot valve operation			Note
	Supply valve	Release valve		
1. Adsorption	SOL.a	SOL.b	SOL.c	When power supply is cut off while the supply valve is ON, the operational state is held.
2. Vacuum release	OFF	ON	ON	
3. Operation stop	OFF	ON	OFF	

Combination Symbol: **K2**

Feature: Single solenoid valve is provided for supply valve.

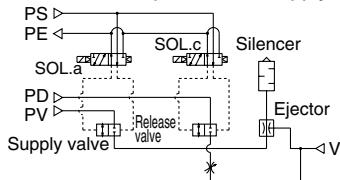


How to Operate

Operation	Pilot valve operation		Note
	Supply valve	Release valve	
1. Adsorption	SOL.a	SOL.c	When power supply is stopped, all operations will be stopped.
2. Vacuum release	OFF	ON	
3. Operation stop	OFF	OFF	

Combination Symbol: **K3**

Feature: Operation can be controlled by an external pilot valve.

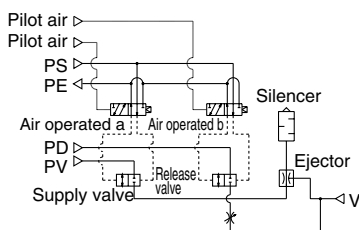

How to Operate


Operation	Pilot valve operation		Note
	Supply valve	Release valve	
1. Adsorption	Air operated a	Air operated b	The product is used under the environment in which solenoid valves cannot be used or when the centralized control is applied using external pilot air.
2. Vacuum release	OFF	ON	
3. Operation stop	OFF	OFF	

⚠ Caution

When pipe connection is made to one port connection (PV port) only, use a function plate (ZR1-RV1). Refer to page 943 for further information.

Combination Symbol: **C1**

Feature: Adsorption of workpieces (when energized) and release of vacuum (when de-energized) are switched by single solenoid valve.

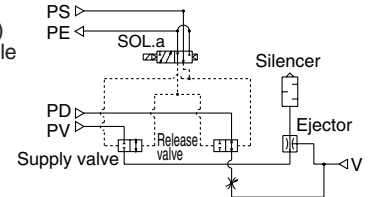


How to Operate

Operation	Pilot valve operation		Note
	Supply valve/Release valve		
1. Adsorption	SOL.a		Be careful for blowing off of workpieces or displacement of adsorption position in case of small and/or lightweight workpieces.
2. Vacuum release	OFF		

Combination Symbol: **C2**

Feature: Adsorption of workpieces and release of vacuum are switched by external pilot valve.

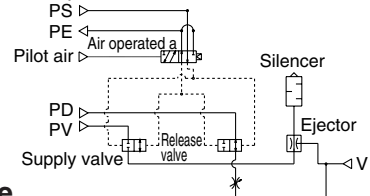


How to Operate

Operation	Pilot valve operation		Note
	Supply valve/Release valve		
1. Adsorption	Air operated a		Be careful for blowing off of workpieces or displacement of adsorption position in case of small and/or lightweight workpieces.
2. Vacuum release	OFF		

Combination Symbol: **C3**

Feature: Adsorption of workpieces (when de-energized) and release of vacuum (when energized) are switched by single solenoid valve.

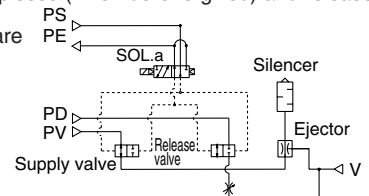


How to Operate

Operation	Pilot valve operation		Note
	Supply valve/Release valve		
1. Adsorption	SOL.a	OFF	Be careful for blowing off of workpieces or displacement of adsorption position in case of small and/or lightweight workpieces.
2. Vacuum release	ON		

Combination Symbol: **C4**

Feature: Adsorption of workpieces and release of vacuum are switched by double solenoid valve.

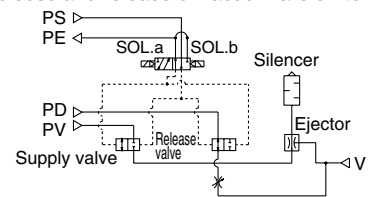

How to Operate


Operation	Pilot valve operation			Note
	Supply valve/Release valve			
1. Adsorption	SOL.a	SOL.b	OFF	When power supply is stopped, supply valve/ release valve will hold the operation.
2. Vacuum release	OFF	ON		

Function Plate/ZR1-RV□

A function plate is used when each connecting port for the valve unit is common. If a function plate is not used (standard), make individual pipe connections to PV, PS, and PD ports respectively.


Without Function Plate (Standard)

Applicable system: Ejector system
External vacuum supply system

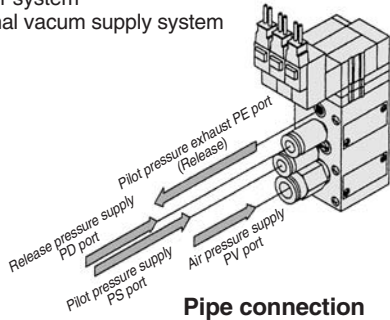

Pipe connection


Circuit diagram

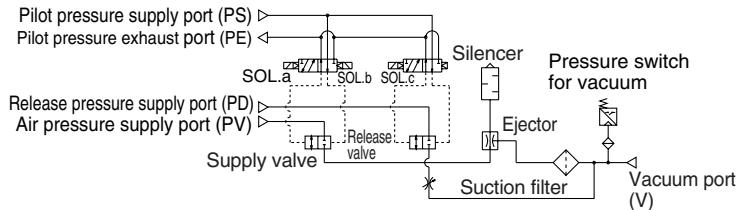

With Function Plate/Applicable to Ejector System Only


When ZR1/RV1 (PV↔PS↔PD) is Selected

Since PV, PS and PD ports are made common via the function plate, pipe only to the PV port.

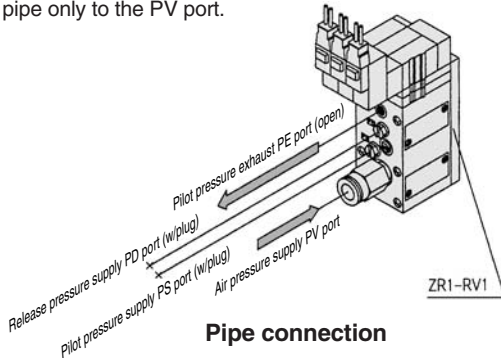


Pipe connection

Circuit diagram

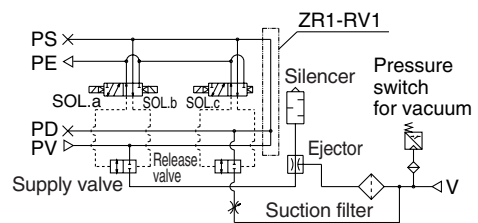


When ZR1/RV2 (PV↔PS/PD) is Selected

Supply air for generating vacuum and releasing vacuum respectively.

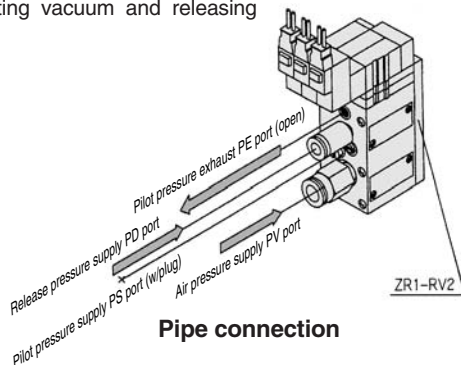

Pipe connection

Circuit diagram

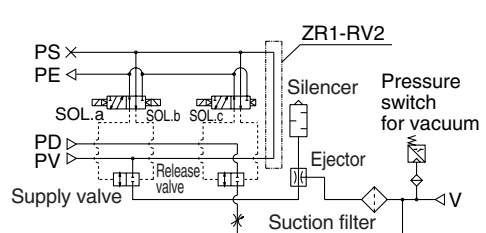

How to Order Function Plate Unit (For Ejector System)

ZR1 - RV 1

Piping specifications

Symbol	Indication	PV port	PS port	PD port
1	PV ↔ PS ↔ PD	Common		
2	PV ↔ PS/PD	Common	Individual	

How to order

Indicate the model numbers of the vacuum module and the function plate.


Example) ZR120S1-K15MZ-EC 1 pc.
* ZR1-RV1 1 pc.

Caution

Length of assembling screw varies when adding function plate. Order from the mounting thread parts list for unit combination on page 982.
Order a plug (M-5P) separately in order to plug the PD and PS ports that are no longer used due to the addition of function plate.

- ZA
- ZX
- ZR**
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

Construction

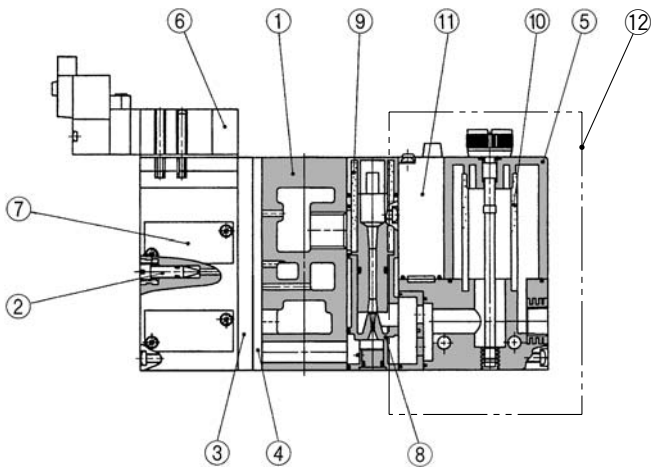

Component Parts

No.	Description	Material	Note
①	Manifold base	Aluminum	
②	Release flow rate adjusting needle	Stainless steel	Refer to Note 2)
③	Function plate	PBT	Refer to page 962.
④	Individual spacer	PBT	Refer to page 962.
⑤ Note 1)	Filter case	Polycarbonate	(ZR1-FC-PC) (Assembly part no.: ZR1-FC-PC-AS) → Refer to page 953



Note 1) Precautions on handling the filter case

1. The case is made of polycarbonate. Therefore, do not contact it or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water soluble cutting oil (alkalinic), etc.

2. Do not expose it to direct sunlight.

Note 2) Turning the release flow rate adjusting needle 2 full turns from the fully closed position renders the needle valve fully open. Do not turn more than two times since turning excessively may cause the needle fall off.

In order to prevent the needle from loosening and falling out, the release flow rate adjusting needle with lock nut is also available.

Replacement Parts

No.	Description	Material	Part no.
⑥	Pilot valve assembly	—	Refer to (5).
⑦	Valve body assembly	—	Refer to (1).
⑧	Ejector assembly	—	Refer to (2).
⑨	Silencer element	PVF	Refer to (3).
⑩	Filter element	PVF	ZR1-FZ(30 μm)
⑪	Pressure switch for vacuum	—	ZSE2-OR-15-□ ZSE30A-00-□-□□□-X505
⑫	Filter switch unit for replacement	—	ZR1-F□□□□-D

How to Order Solenoid Valves/Air Operated Valves


Air operated

ZR1-VJA3130

Solenoid valve

ZR1-VJ3233 □ - 5 M Z □ - X17 X18

ZR1-VJ3133 □ - □ □ □ □ □ - □ □ □ □ □

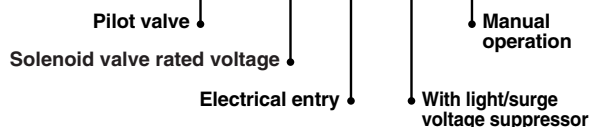

* Refer to page 940 for detailed specifications of each code.

(Note) Pilot valve gasket is included. (ZR1-PVG-1 or ZR1-PVG-2)

(1) How to Order Valve Body Assembly

ZR1-VD K1 □ 5 M Z □ - L

Combination of supply valve and release valve

Pilot valve

Solenoid valve rated voltage

Manual operation

Release flow rate adjusting needle

With light/surge voltage suppressor

Electrical entry



* Refer to page 940 for detailed specifications of each code.

(2) How to Order Ejector Assembly

ZR1-WD 10 S 1

Nozzle diameter

10	1.0 mm
13	1.3 mm
15	1.5 mm
18	1.8 mm
20	2.0 mm

Ejector exhaust

1	Built-in silencer
2	Port exhaust
3	Common exhaust

Maximum vacuum pressure

S	-84 kPa
L	-53 kPa

(3) How to Order Silencer Element

ZR1-SZ 10

Nozzle diameter

10	1.0 mm
13	1.3 mm
15	1.5 mm
18	1.8 mm
20	2.0 mm

(4) Pressure Switch for Vacuum + Suction Filter Unit

ZR1-F E L □ □ - D

Option (Connector/lead wire specifications)

Unit specifications

Output specifications

Combination of switch/filter




* Refer to page 953 for detailed specifications of each code.

(5) How to Order Pilot Valves

Combination Symbol	Components		Model
	Supply valve	Release valve	
K1	Double solenoid valve N.C. (VJ3233)	Single solenoid valve N.C. (VJ3133)	Refer to "How to Order" below. Supply: ZR1-VJ3233-□□□□-X17 Release: ZR1-VJ3133-□□□□
C4	Double solenoid valve N.O. (VJ3233)	Double solenoid valve N.O. (VJ3233)	Refer to "How to Order" below. ZR1-VJ3233-□□□□-X18
K3	Air operated N.C (VJA3130)	Air operated N.O (VJA3130)	ZR1-VJA3130

Ejector Unit/Series ZR1

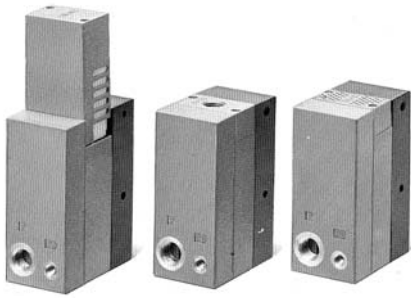

Model/Max. Vacuum Pressure -84 kPa (S: Standard type)

Model	Nozzle dia. (mm)	Maximum suction flow rate (ℓ/min (ANR))	Air consumption (ℓ/min (ANR))	Mass (With bracket) (kg)
ZR1-W10S□	1.0	22	46	0.132
ZR1-W13S□	1.3	38	78	0.134
ZR1-W15S□	1.5	54	95	0.136
ZR1-W18S□	1.8	62	150	0.154
ZR1-W20S□	2.0	84	185	0.156


Model/Max. Vacuum Pressure -53 kPa (L: Large flow type)

Model	Nozzle dia. (mm)	Maximum suction flow rate (ℓ/min (ANR))	Air consumption (ℓ/min (ANR))	Mass (With bracket) (kg)
ZR1-W10L□	1.0	42	46	0.133
ZR1-W13L□	1.3	52	78	0.133
ZR1-W15L□	1.5	74	95	0.135
ZR1-W18L□	1.8	88	150	0.155
ZR1-W20L□	2.0	105	185	0.154

Common Specifications

Maximum operating pressure	0.7 MPa
Supply pressure range	0.2 to 0.55 MPa
Standard supply pressure	0.45 MPa
Operating temperature range	5 to 50°C
Model (Ejector exhaust method)*	Code 1: Built-in silencer — For unit and manifold Code 2: Individual exhaust — For unit and manifold
Standard accessory	Bracket (P3270154)

JIS Symbol

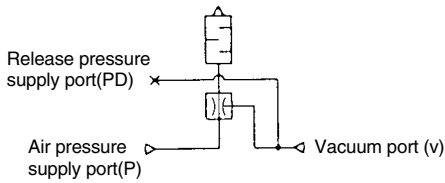

* How to Order: Code 1 and 2 are the suffixes in the ordering number to indicate the exhaust method.
Note) Operation outside of the specified supply pressure and operating temperature range may cause a serious accident or damage.

How to Order

ZR1-W 20 S 1

Nozzle diameter

10	1.0 mm
13	1.3 mm
15	1.5 mm
18	1.8 mm
20	2.0 mm

Ejector exhaust

1	Built-in silencer
2	Individual exhaust*

* Port size:
RC 1/8 (Nozzle dia. 1.0 to 1.5 mm)
RC 1/4 (Nozzle dia. 1.8, 2.0 mm)

Maximum vacuum pressure

S	- 84 kPa
L	- 53 kPa

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

HEP

Related Equipment


Series ZR

Characteristics (Representative value)


Ejector Unit/Standard Type (S): Max. Vacuum Pressure -84 kPa

At 0.45 MPa


ZR1-W10S1 Exhaust characteristics **Flow characteristics**

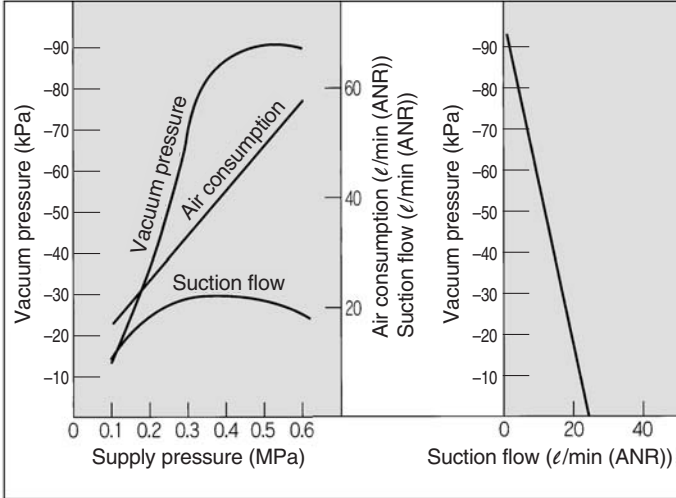


ZR1-W18S1 Exhaust characteristics **Flow characteristics**

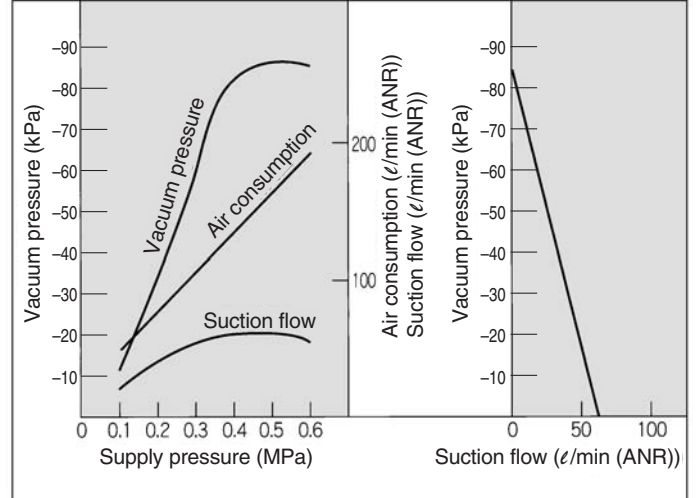


ZR1-W13S1 Exhaust characteristics **Flow characteristics**

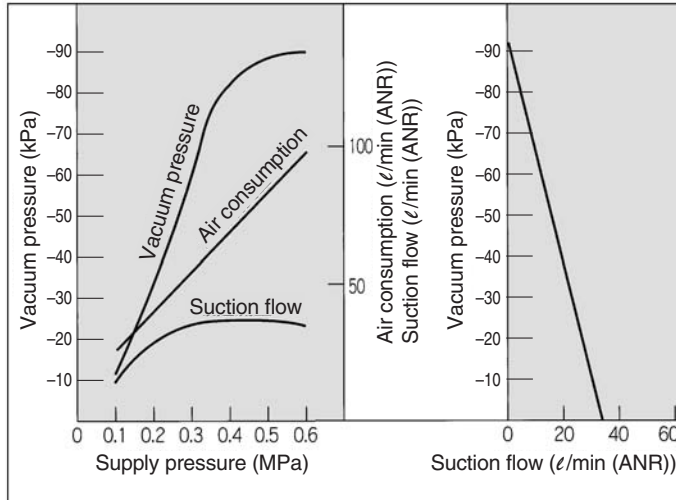

ZR1-W20S1 Exhaust characteristics **Flow characteristics**

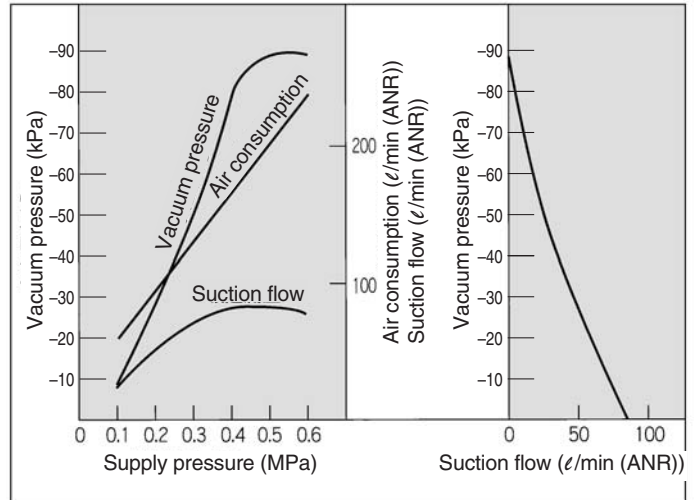


ZR1-W15S1 Exhaust characteristics **Flow characteristics**

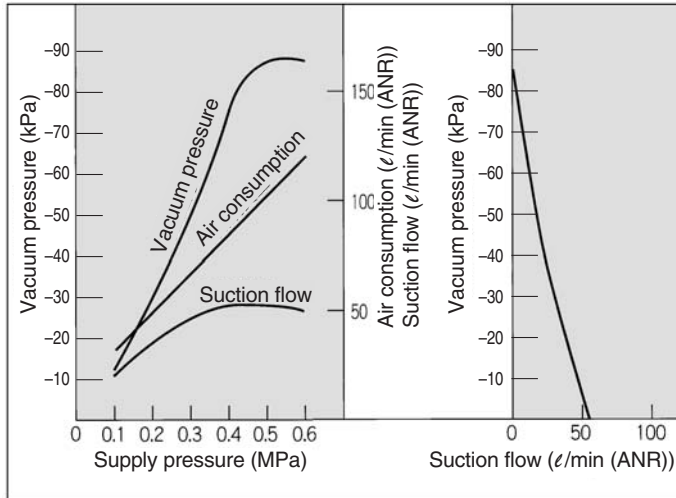


Ejector Unit/Large Flow Type (L): Max. Vacuum Pressure -53 kPa

At 0.45 MPa


ZR1-W10L1 Exhaust characteristics **Flow characteristics**

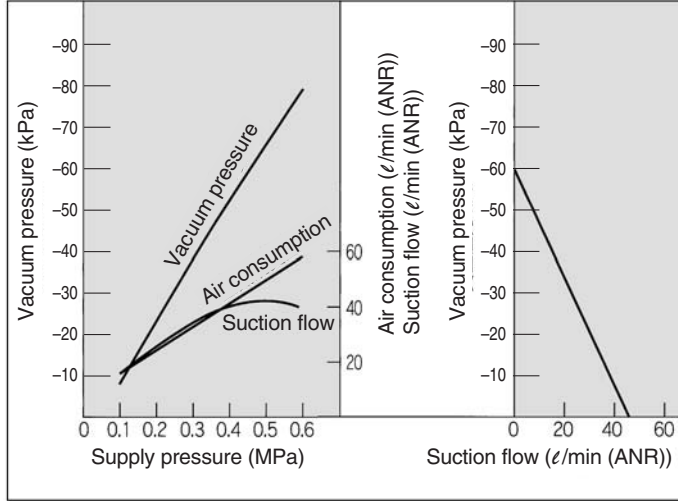


ZR1-W18L1 Exhaust characteristics **Flow characteristics**

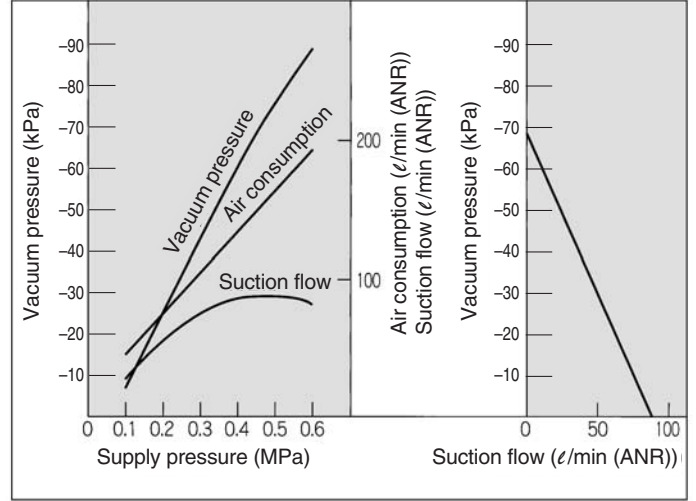


ZR1-W13L1 Exhaust characteristics **Flow characteristics**

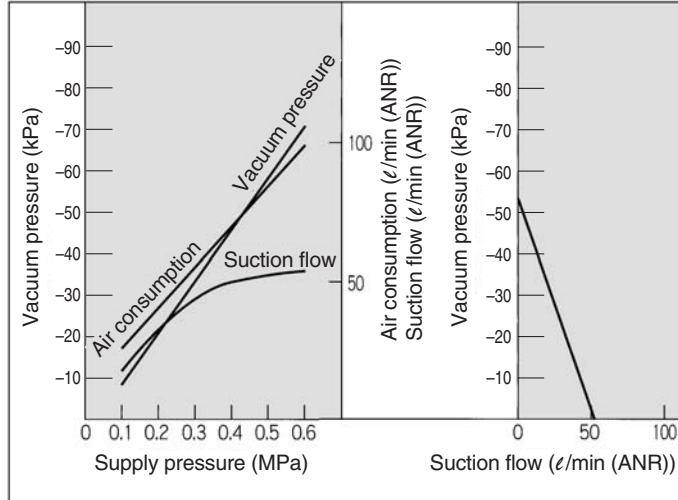


ZR1-W20L1 Exhaust characteristics **Flow characteristics**

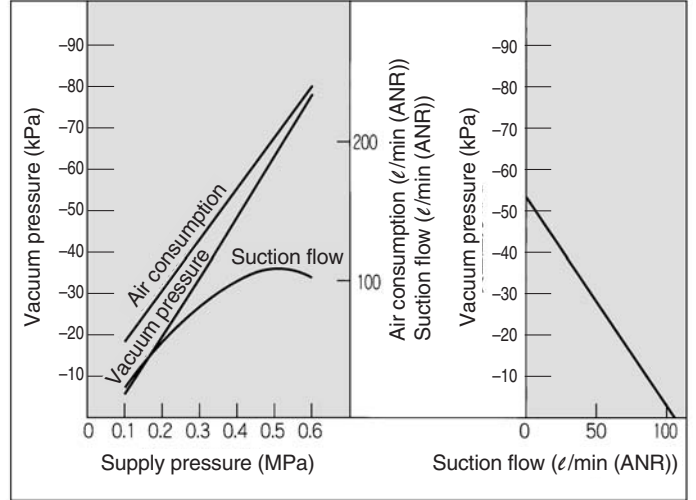

ZR1-W15L1 Exhaust characteristics **Flow characteristics**

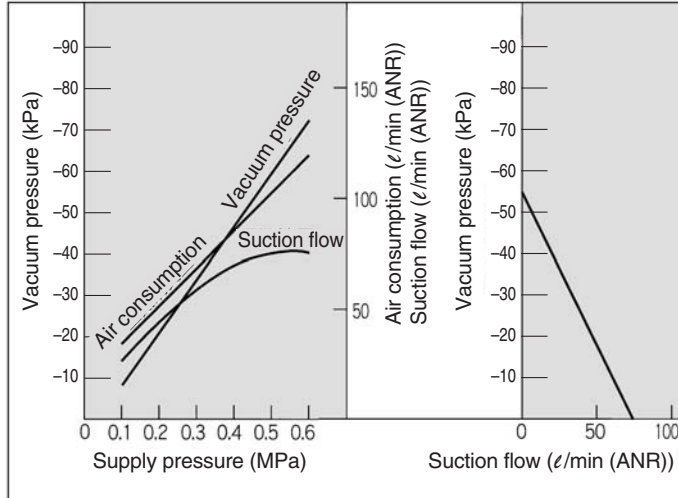

How to Read Flow Characteristics Graph

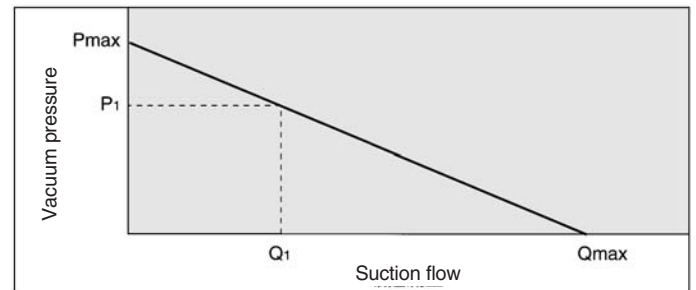

Flow characteristics are expressed in ejector vacuum pressure and suction flow. If suction flow rate changes, the vacuum pressure will also be changed. Normally this relationship is expressed in ejector standard use. In graph, P_{max} is max. vacuum pressure and Q_{max} is maximum suction flow. The values are specified according to catalog use. Changes in vacuum pressure are expressed in the below order.


1. When ejector suction port is covered and made airtight, suction flow becomes 0 and vacuum pressure is at maximum value (P_{max}).
2. When suction port is opened gradually, air can flow through, (air leakage), suction flow increases, but vacuum pressure decreases. (condition P₁ and Q₁)
3. When suction port is opened further, suction flow moves to maximum value (Q_{max}), but vacuum pressure is near 0 (atmospheric pressure).

Based on the above, when vacuum port (vacuum piping) has no leakage, vacuum pressure becomes maximum, and vacuum pressure decreases as leakage increases. When leakage value is the same as max. suction flow, vacuum pressure is near 0. In the case when ventirative or leaky work should be adsorbed, please note that vacuum pressure will not rise.

- ZA
- ZX
- ZR**
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

Series ZR



Ejector Unit

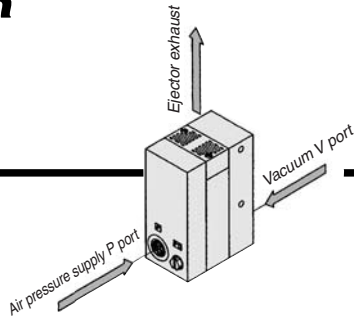





Nozzle Dia./ $\phi 1.0, \phi 1.3, \phi 1.5, \phi 1.8, \phi 2.0$

Nozzle dia./ $\phi 1.0, \phi 1.3, \phi 1.5$ mm

ZR1-W¹⁰₁₃□□
15

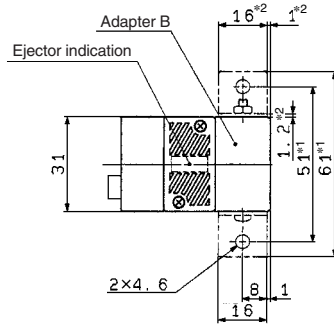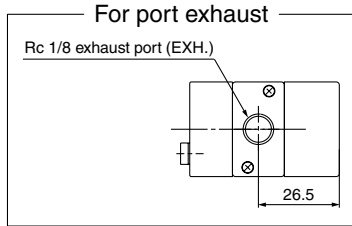



Circuit diagram

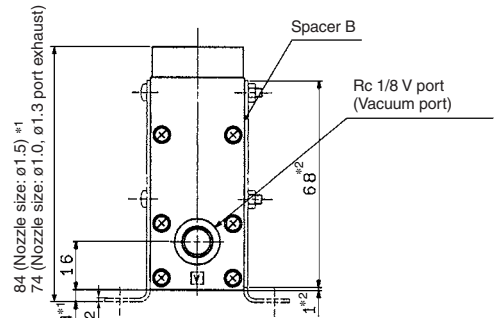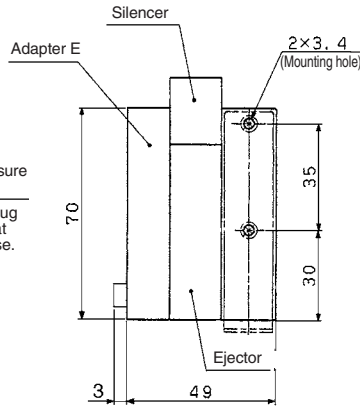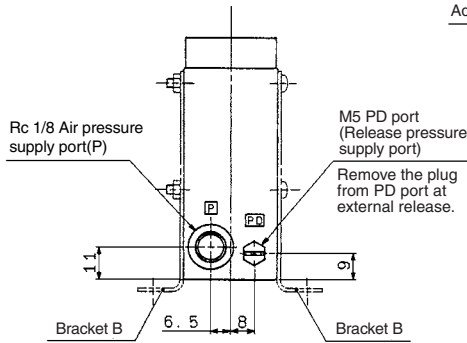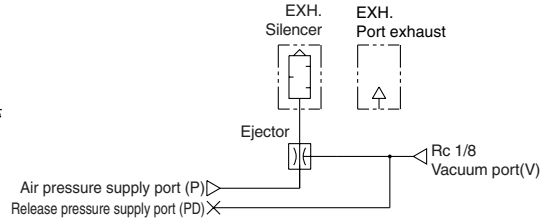





Note) *1 Dimensions for mounting bracket B
*2 Dimensions for mounting spacer B
Spacer B is used to leave space for maintenance (for replacement of silencer etc.) on side mounting.
Bracket B part no.: P3270154#1 (Standard accessory)
Spacer B part no.: P3270157#1

Nozzle dia./ $\phi 1.8, \phi 2.0$ mm

ZR1-W¹⁸₂₀□□

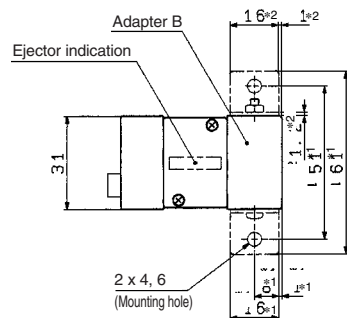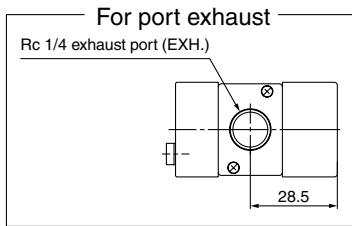

Circuit diagram

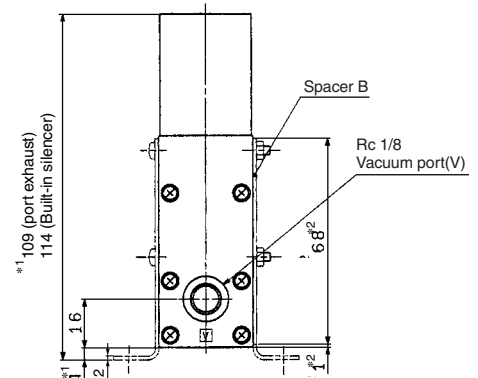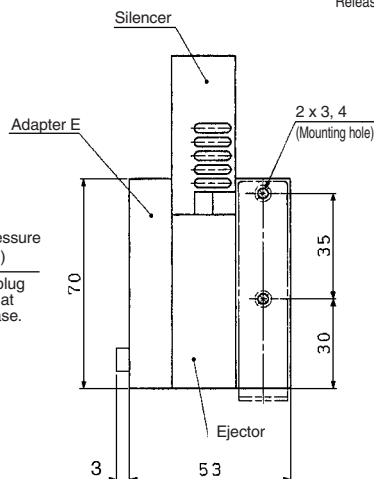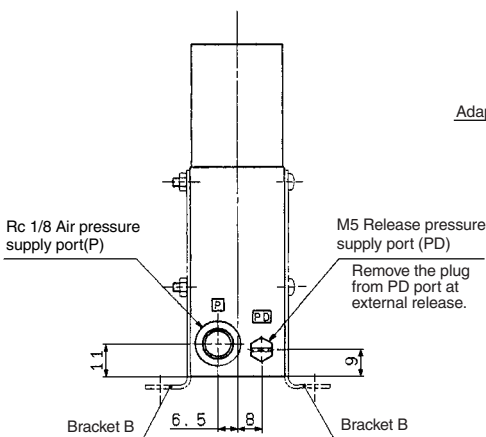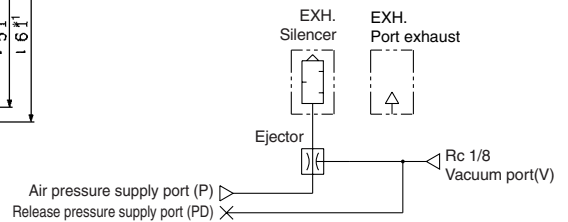


Pressure Switch Unit for Vacuum/Pressure Switch for Vacuum: ZSE2-0R-□□

Quick response: 10 ms

**Compact size: 39H x 20W x 15D
(except the connecting portion)**

Improved wiring: Connector style

Uses a carrier diffusion semiconductor pressure sensor

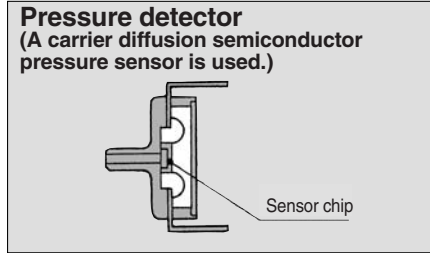


Specifications

Pressure switch for vacuum part no.	ZSE2-0R-15□	ZSE2-0R-55□
Fluid	Air	
Setting pressure range	-101 to 0 kPa	
Hysteresis	3% F.S. or less (Fixed)	
Temperature characteristics (Based on 25°C)	± 3% F.S. or less	
Operating voltage	12 to 24 VDC (Ripple ±10% or less)	
Output	NPN Open collector 30 V, 80 mA	PNP Open collector 80 mA
Indicator light	Lights up when ON	
Current consumption	17 mA or less (when 24 VDC is ON)	
Proof pressure (Max. operating pressure)	0.5 MPa*	
Operating temperature range	5 to 50°C	


* When using ejector system, instantaneous pressure up to 0.5 MPa will not damage the switch.
Note) Operation outside of the maximum operating pressure and operating temperature range may cause a serious accident or damage.

Wiring

ZSE2 connection

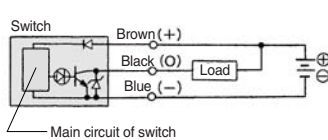

Connection with PLC at negative COM terminal

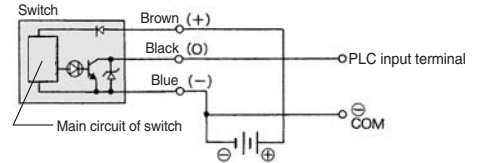

How to Order

ZSE2 - 0R - 15 L

Output specifications

15	NPN Open collector 30V 80mA
55	PNP Open collector 80mA

Piping specifications

Nil	Grommet type	Lead wire length 0.6 m
L		Lead wire length 3 m
C	Connector type	Lead wire length 0.6 m
CL		Lead wire length 3 m
CN		W/o lead wire

With Connector/How to Order

- Without lead wire (housing and 3 sockets) ZS-10-A
- With lead wire ZS-10-5A-□

Lead wire length

Nil	0.6 m
30	3 m
50	5 m

Note) When requiring a switch with lead wire of 5 m, indicate separately the model numbers of the connector type switch without lead wire and the connector assembly with 5 m lead wire.

Example) ZSE2-0R-15CN 1 pc.
ZS-10-5A-50 1 pc.



* Refer to Best Pneumatics No. 6 for detailed specifications of pressure switches for vacuum.


- ZA
- ZX
- ZR
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

Pressure Switch Unit for Vacuum/Pressure Switch for Vacuum: ZSE2-0R-□□


Guidelines for Use of Pressure Switch Unit for Vacuum

System circuit for work adsorption

Ejector style

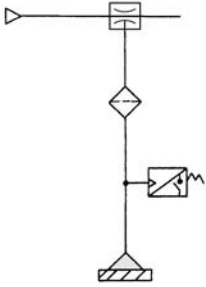


Vacuum pump style

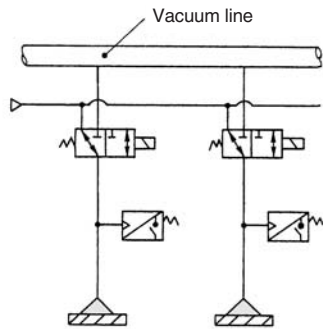

When pads and switches are common to one vacuum source, sometimes there is a possibility, depending on the number of adsorption and non-adsorption applications at each point in time, that the switches will not work within the range of set pressures due to pressure variations from the vacuum source. In particular, when small diameter nozzles are used for adsorption, the switches are greatly influenced by pressure variations. In order to remedy this situation, the following circuit is recommended.


Vacuum regulator

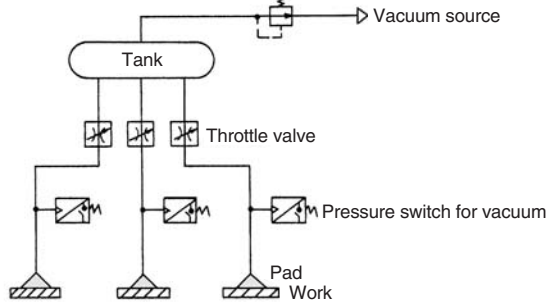






- Adjust the throttle valve to reduce the pressure fluctuation between absorption and non-absorption.
- Stabilize the source pressure by providing a tank and a vacuum regulator.
- If a vacuum switch valve is inserted into individual lines and false absorption occurs, each valve should be turned OFF to minimize the influences on other pads.

Pressure Switch for Vacuum: ZSE2-0R-□□

ZSE2-0R-□
ZSE2-0R-□L

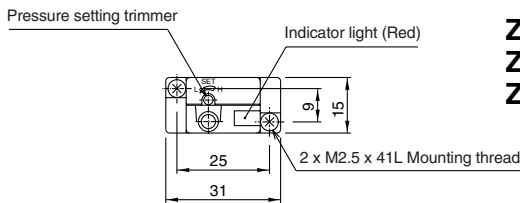


ZSE2-0R-□C
ZSE2-0R-□CL
ZSE2-0R-□CN

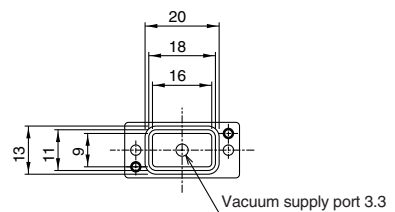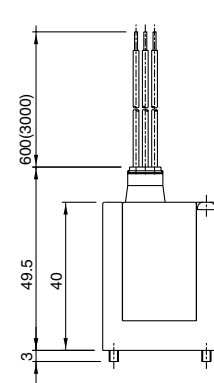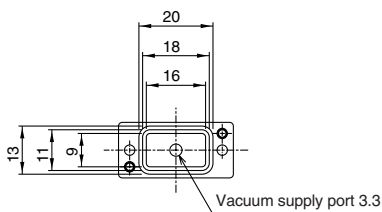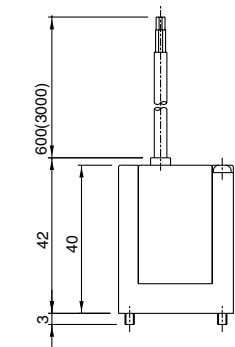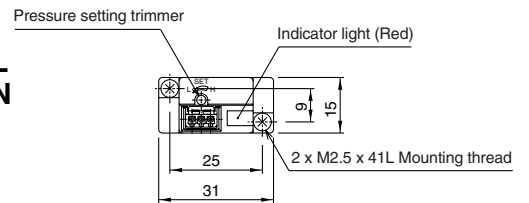


How to Set Vacuum Pressure

- Pressure trimmer selects the ON pressure. Clockwise rotation increases high vacuum set point.

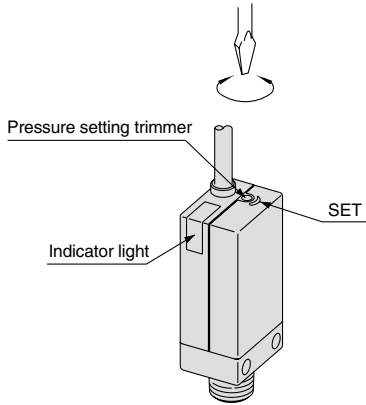


- When using the switch to confirm correct adsorption, the vacuum pressure is set to the minimum value to reliably adsorb. If the value is set below the minimum, the switch will be turned ON even when adsorption has failed or is insufficient. If the pressure is set too high, the switch may not operate stably even though it may adsorb correctly.

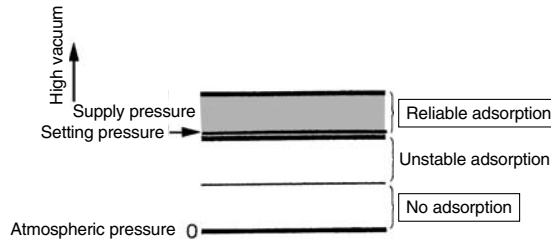

Hysteresis


Hysteresis is the actual pressure variance from set pressure occurring when the output signal turns from ON to OFF. The set pressure is the pressure selected to switch from OFF to ON mode.

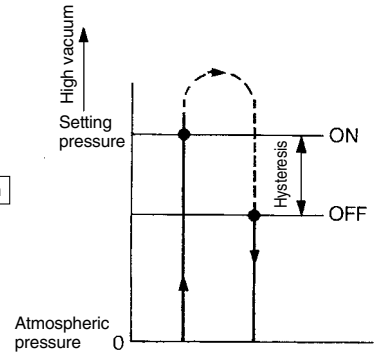

How to Use Connector


1. Attaching and detaching connectors

- When assembling the connector to the switch housing, push the connector straight onto the pins until the level locks into the housing slot.
- When removing the connector from the switch housing, push the lever down to unlock it from the slot and then withdraw the connector straight off of the pins.

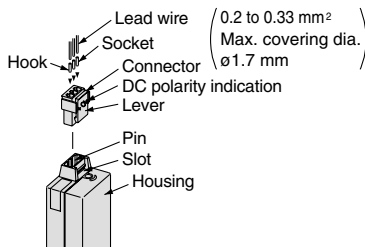

2. Crimping of lead wires and sockets

Strip 3.2 to 3.7 mm at the end of the lead wires, insert the ends of core wires evenly into the sockets, and then crimp with a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area. (Crimping tool: model no. DXT170-75-1)

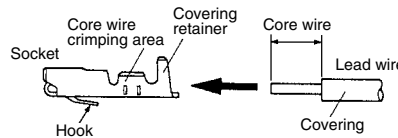


3. Attaching and detaching of socket to connector with lead wire

• Attaching

Insert the sockets into the square holes of the connector (with +, 1, 2, - indication), and continue to push the sockets all the way end. (When they are pushed in their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.

• Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (about 1 mm). If the socket will be used again, first spread the hook outward.

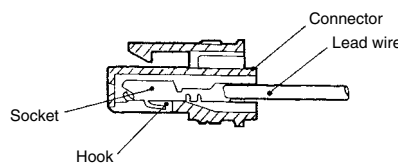

Precautions

Be sure to read before handling. Refer to front matters 38 and 39 for Safety Instructions and pages 844 to 846 for Vacuum Equipment Precautions.

Mounting

Warning

1. Do not give an excessive impact load.
Do not drop, bump or apply excessive impact (1000 m/s²) when handling. Even if the switch body is not damaged, the switch may suffer internal damage that will lead to malfunction.
2. Hold the product from the body side when handling.
When raising and moving the product, do not raise it by holding the lead wire only, but hold the body. It may cause malfunction due to broken contacts.

ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

Vacuum Pressure Switch Unit/Digital Pressure Switch for Vacuum: ZSE30A-00-□-□□□-X505



How to Order

Refer to the separate catalog (CAT.ES100-70) for details.

ZSE30A-00-N-M□□-X505

Symbol	Output		Analog output	
	Type	Point	Voltage	Current
N	NPN	1	—	—
P	PNP	1	—	—
A	NPN	2	—	—
B	PNP	2	—	—
C	NPN	1	○	—
D	NPN	1	—	○
E	PNP	1	○	—
F	PNP	1	—	○

Option 2 (Operating manual specifications)

Nil	Operating manual (Leaflet)
Y	Without operating manual


Option 1 (Connector/Lead wire specifications)

Nil	Without lead wire
L	Lead wire with connector (Length 2 m)

Display unit

Nil	With unit display switching function
M	Fixed SI unit
P	With unit display switching function (Initial value psi)

3-step setting

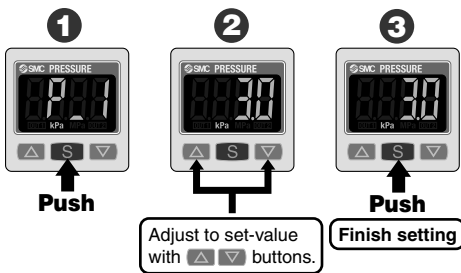

Power-saving function

Power consumption is reduced by turning off the monitor. (Reduce power consumption by up to 20%.)

Specifications

Rated pressure range	0.0 to -101.0 kPa
Set pressure range	10.0 to -105.0 kPa
Withstand pressure	500 kPa
Minimum unit setting	0.1 kPa
Applicable fluid	Air, Non-corrosive gas, Non-flammable gas
Power supply voltage	12 to 24 VDC ±10% (with power supply polarity protection)
Current consumption	40 mA (at no load)
Switch output	NPN or PNP open collector 1 output NPN or PNP open collector 2 outputs (selectable)
Maximum load current	80 mA
Maximum applied voltage	28 V (at NPN output)
Residual voltage	1 V or less (with load current of 80 mA)
Response time	2.5 ms or less (with anti-chattering function: 20, 100, 500, 1000, 2000 ms)
Short circuit protection	Yes
Repeatability	±0.2% F.S. ±1 digit
Hysteresis	Variable (0 to variable)
Window comparator mode	Variable (0 to variable)
Linearity	±1% F.S. or less
Output impedance	Approx. 1 kΩ
Linearity	±1% F.S. or less
Load impedance	Maximum load impedance: Power supply voltage 12 V: 300 Ω, Power supply voltage 24 V: 600 Ω Minimum load impedance: 50 Ω
Display	4-digit, 7-segment, 2-color LCD (Red/Green) Sampling cycle: 5 times/sec.
Display accuracy	±2% F.S. ±1 digit (Ambient temperature of 25°C)
Indicator light	Lights up when switch output is turned ON. (OUT1: Green, OUT2: Red)
Enclosure	IP40
Operating temperature range	Operating: 0 to 50°C, Stored: -10 to 60°C (No freezing or condensation)
Operating humidity range	Operating/Stored: 35 to 85% RH (No condensation)
Withstand voltage	1000 VAC for 1 minute between live parts and case
Insulation resistance	50 MΩ or more between live parts and case (at 500 VDC Mega)
Vibration resistance	10 to 150 Hz at whichever is smaller of 1.5 mm amplitude or 20 m/s ² acceleration, in X, Y, Z directions, for 2 hours each
Impact resistance	100 m/s ² , in X, Y, Z directions, for 2 hours each
Temperature characteristics	±2% F.S. (Based on 25°C)
Lead wire	Oilproof heavy-duty vinyl cable, 3 cores ø3.5, 2 m 4 cores Conductor area: 0.15 mm ² (AWG26) Insulator O.D.: 1.0 mm
Standards	CE Marking, UL/CSA, RoHS compliance

Note 1) When analog voltage output is selected, analog current output cannot be used together.

Note 2) When analog current output is selected, analog voltage output cannot be used together.

Pressure Switch for Vacuum + Suction Filter Unit: ZR1-F□□□□

Combination unit of vacuum pressure switch for vacuum pressure detection and suction filter to protect the unit from dust and contamination.




Filter case

⚠ Caution

1. The case is made of polycarbonate. Therefore, do not contact it or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water soluble cutting oil (alkalinic), etc.
2. Do not expose it to direct sunlight.

How to Replace Elements

When an element becomes clogged, adsorption performance and response times are degraded. Stop operation and replace element. (Element no. ZR1-FZ). Please ensure that gasket is in slot before re-installation.

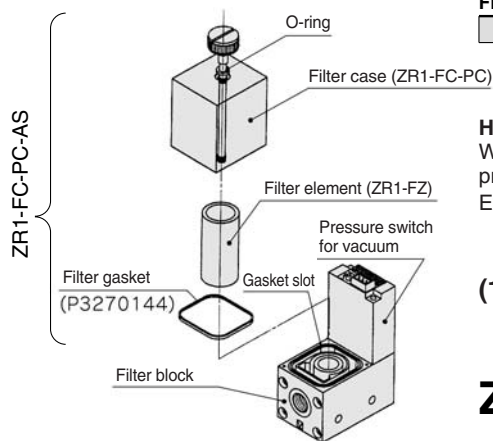

Specification

Unit no.		ZR1-F□□□□
Suction filter	Operating pressure range	Vacuum to 100 kPa
	Operating temperature range	5 to 50°C
	Filtration degree	30 μm
Filtration material		PVF
Pressure switch for vacuum		Refer to page 949 and 952 regarding pressure switch for vacuum.
Standard option		Bracket A (P3270153)

Note) If not operated within the specified range of pressure and temperature, trouble may be caused.

Combination of Pressure Switch for Vacuum and Suction Filter

Combination symbol	Suction filter	Pressure switch for vacuum	Weight (with bracket A) (kg)
E	●	ZSE2	0.15
D	●	ZSE30A	0.23
F	●	—	0.15

How to Order

ZR1 - F □ □ □ □

Combination of pressure switch/filter

Nil	None
D	Digital pressure switch for vacuum (ZSE30A) + Filter
E	Pressure switch for vacuum (ZSE2) + Filter
F	Filter

*The filter mounted on the product is a simplified one. When used in an environment with a lot of dust, the built-in filter is likely to be clogged soon. The use with the ZFA, ZFB and ZFC series is recommended.

Output specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

N	NPN open collector 1 output
P	PNP open collector 1 output
A	NPN open collector 2 outputs
B	PNP open collector 2 outputs
C	NPN open collector 1 output + Analog voltage output
D	NPN open collector 1 output + Analog current output
E	PNP open collector 1 output + Analog voltage output
F	PNP open collector 1 output + Analog current output

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	NPN open collector 1 output
55	PNP open collector 1 output

Filter specifications (F)

Nil	No setting
-----	------------

How to order

When requiring a switch with lead wire of 5 m, indicate separately the model numbers of a pressure switch unit for vacuum without a lead wire connector and the 5 m lead wire connector.
Ex.) ZR1□□□-□□□□□□□□CN 1 pc.
ZS-10-5A-50 2 pcs.

(1) Lead wire length for pressure switch for vacuum connector assembly

ZS - 10 - 5A - □

Lead wire length

Nil	0.6 m
30	3 m
50	5 m

(2) Lead wire length for digital pressure switch for vacuum connector assembly

ZS - 38 - 3 L

Lead wire core

3	3 cores, 1 output, 2 m (Output specifications: N, P)
4	4 cores, 2 outputs, 2 m (Output specifications: A, B, C, D, E, F)

Lead wire specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

Nil	Without lead wire
L	Lead wire with connector (Length 2 m)

Refer to "Table (2)" for part numbers for lead wire with connector.

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	Grommet/Lead wire (Length 0.6 m)
L	Grommet/Lead wire (Length 3 m)
C	Lead wire with connector (Length 0.6 m)
CL	Lead wire with connector (Length 3 m)
CN	With connector/Without lead wire

Refer to "Table (1)" for part numbers for lead wire with connector.

Filter specifications (F)

Nil	No setting
-----	------------

Unit specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

Nil	With unit switching function
M	SI unit only
P	With unit switching function (Initial value psi)

Note 1) This is no longer sold for use in Japan due to the Weight and Measure Act (implemented October, 1999).

Note 2) Fixed unit: kPa

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	No setting
-----	------------

Filter specifications (F)

Nil	No setting
-----	------------

ZR

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

HEP

Related Equipment




Series ZR

Pressure Switch for Vacuum + Suction Filter Unit: ZR1-F□□□□




Dimensions: ZR1-F□□□□

Circuit diagram



ZR1-FE□□□□

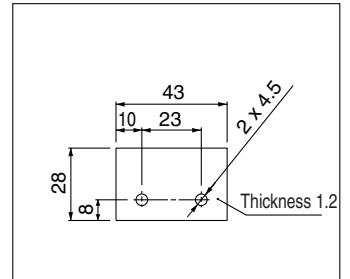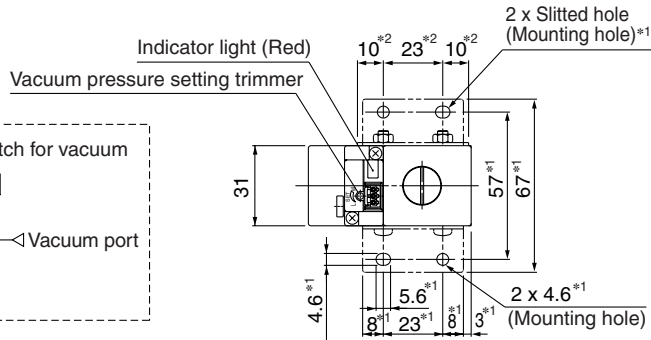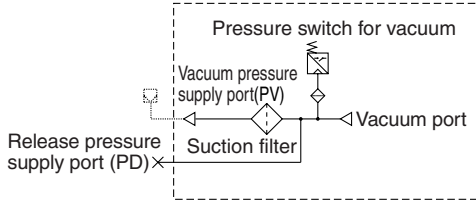

Spacer A is used to leave space for maintenance (for replacement of filter element etc.) on side mounting.

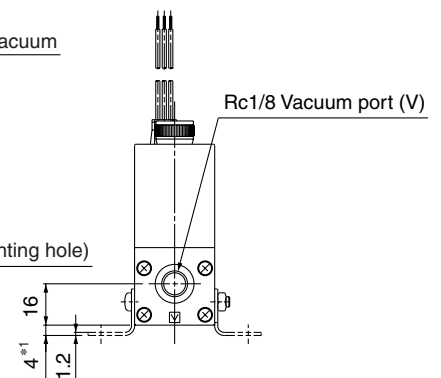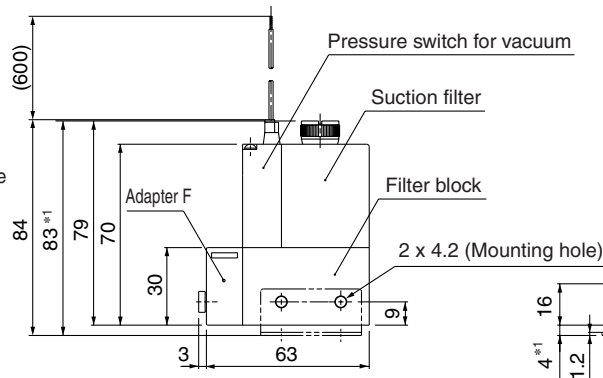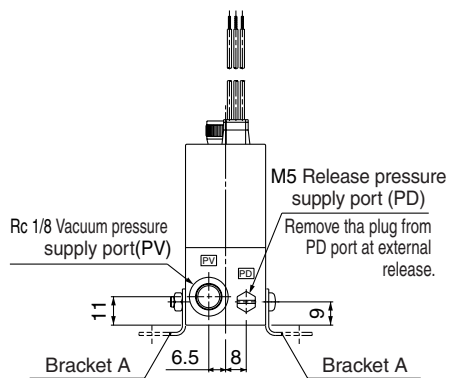

ZR1-FD□□□□

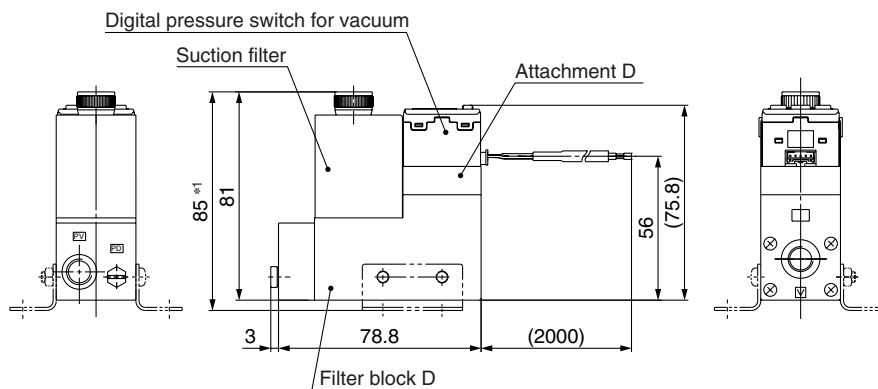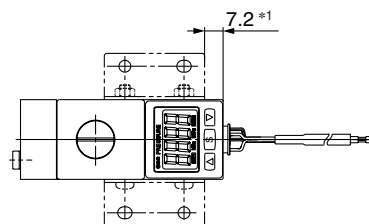

Note) * 1 Dimensions for mounting bracket A * 2 Dimensions for mounting spacer A
Bracket A part no. : P3270153#1 (Standard accessory)
Spacer A part no. : P3270156#1

Suction Filter: ZR1-FX

ZR1-FX is to be used alone and cannot be combined with other units.



Specification

Model	ZR1-FX
Operating pressure range	Vacuum to 0.5 MPa
Operating temperature range	5 to 50°C
Filtration efficiency	30 μm
Element	PVF
Mass (With bracket)	0.1 kg



Note) If not operated within the specified range of pressure and temperature, trouble may be caused.



Filter case

⚠ Caution

1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water soluble cutting oil (alkalinic), etc.
2. Do not expose it to direct sunlight.

Dimensions: ZR1-FX

Circuit diagram

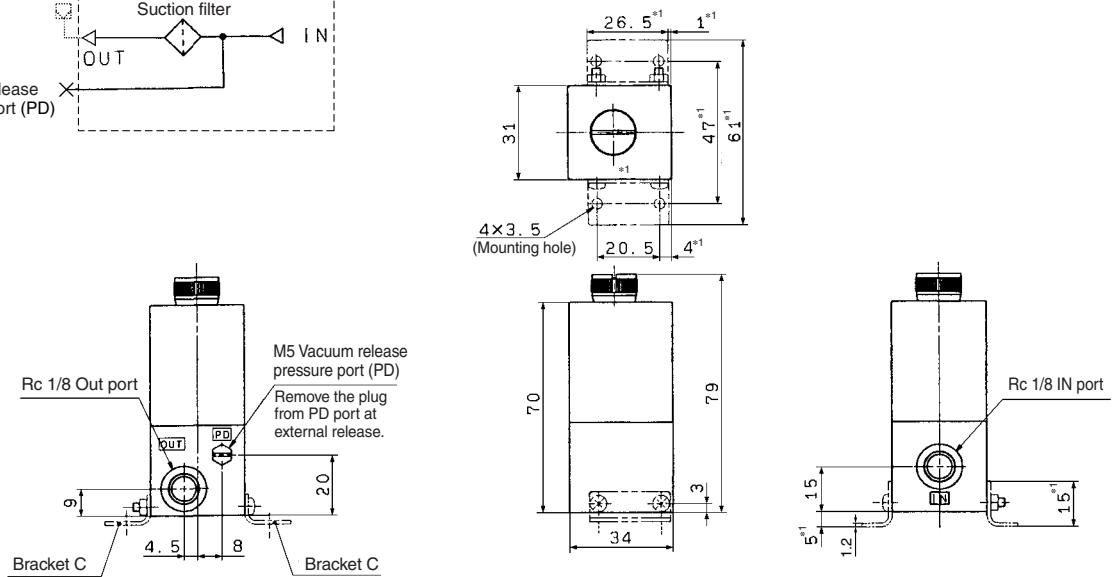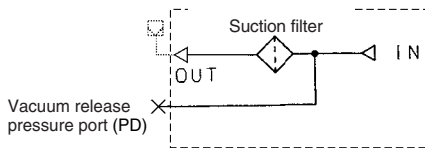


Note) *1 Dimensions for mounting bracket C
Bracket C part no. : P3270155#1 (Standard accessory)

- ZA
- ZX
- ZR**
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

Series ZR

Ejector System Complete Unit

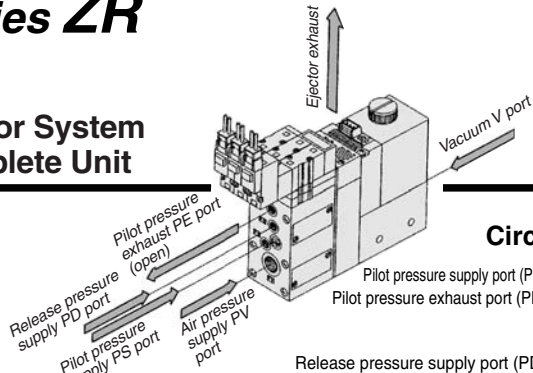


<Components> Ejector + Valve + Pressure Switch for Vacuum + Filter


Nozzle dia./ $\phi 1.0, \phi 1.3, \phi 1.5$

ZR1¹⁰₁₃□1-K1□M□□-E□□-□
15


For port exhaust

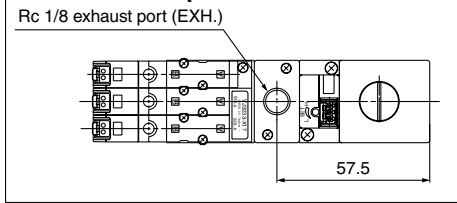




Circuit diagram

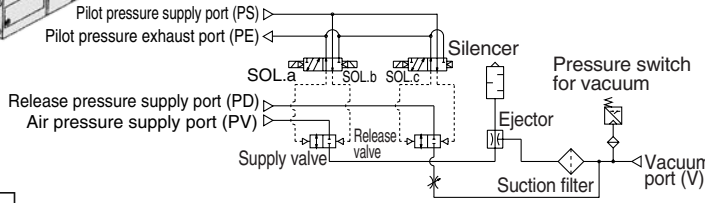

Spacer A

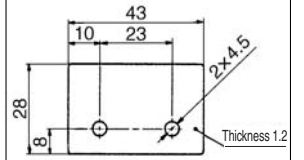





Spacer A is used to leave space for maintenance (for replacement of filter element etc.) on side mounting.

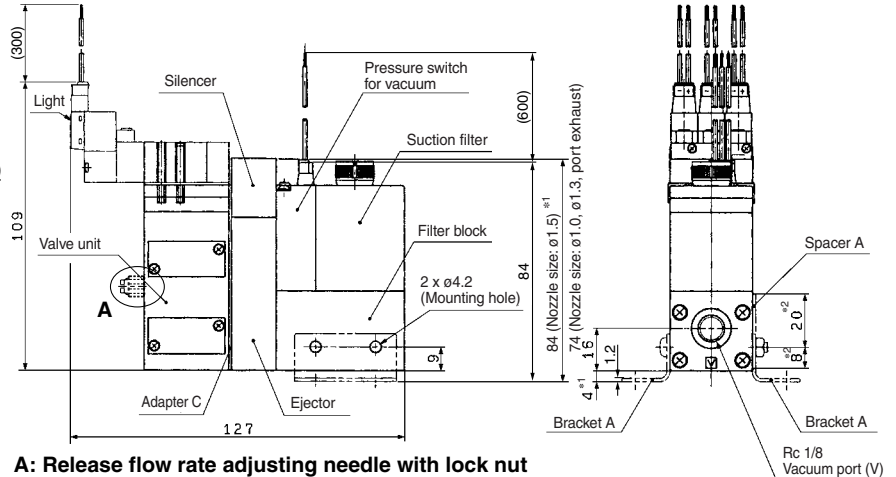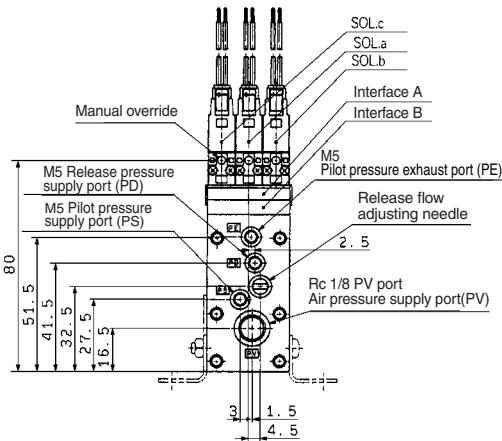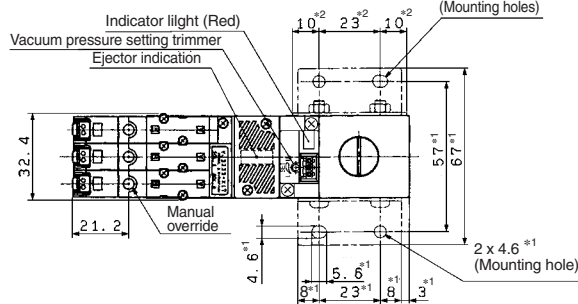

ZR1¹⁰₁₃□1-K1□M□□-D□□□-□
15

A: Release flow rate adjusting needle with lock nut



For port exhaust

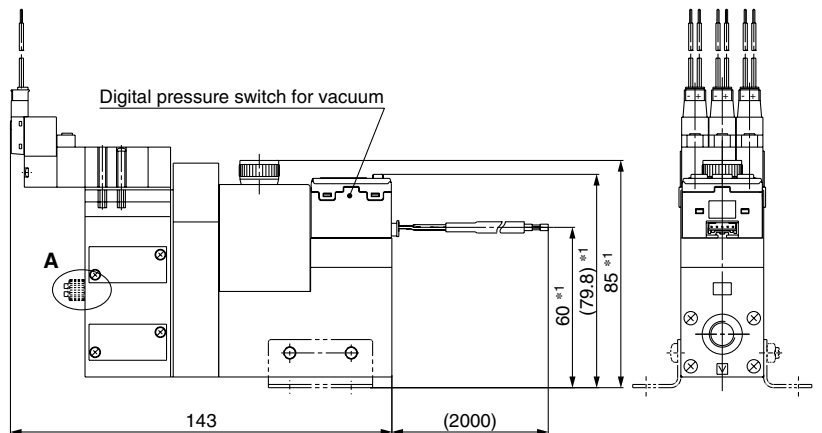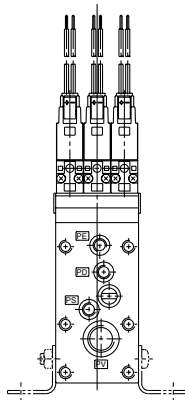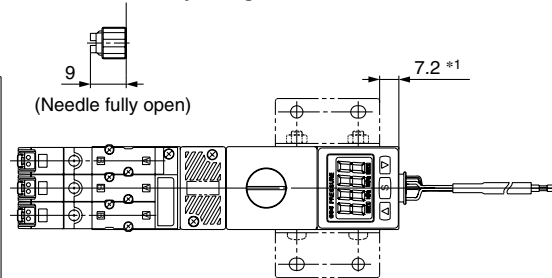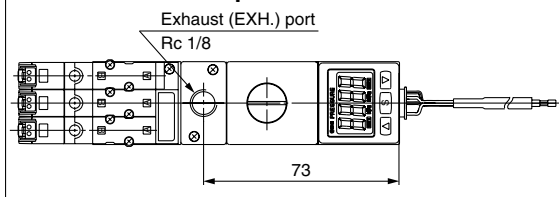

Nozzle dia./ø1.8, ø2.0




ZR1¹⁸₂₀ □1-K1 □M □□-E □□-□

A: Release flow rate adjusting needle with lock nut



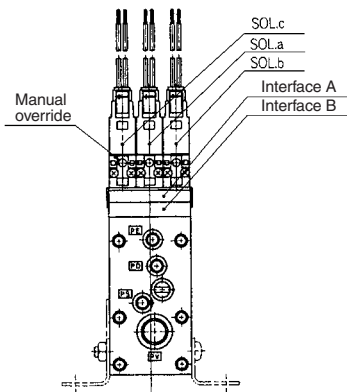
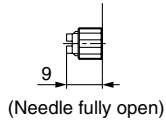


★ Dimensions not indicated are identical to the left drawing.

ZR1¹⁸₂₀ 1-K1 □M □□-D □□□-□

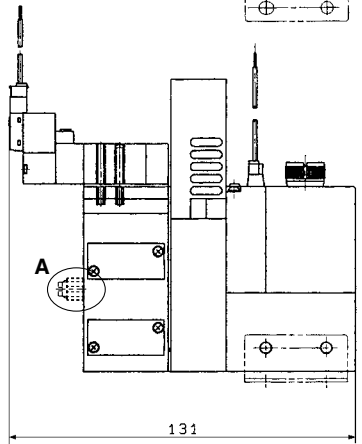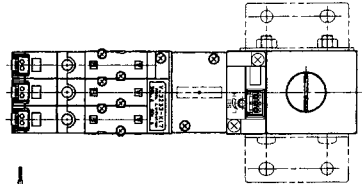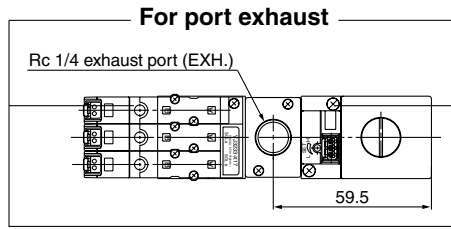

Note) *1 Dimensions for mounting bracket A
*2 Dimensions for mounting spacer A
Bracket A part no. : P3270153#1
(Standard accessory)
Spacer A part no. : P3270156#1

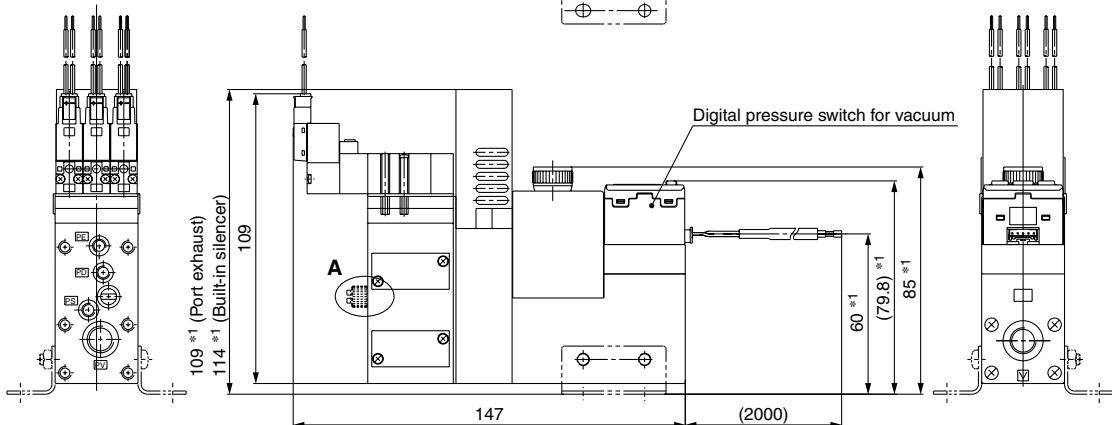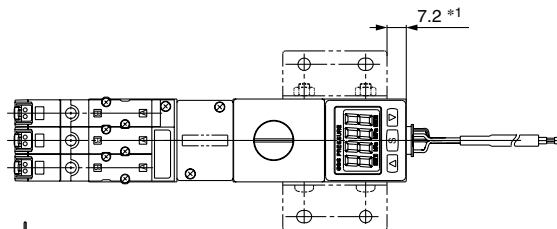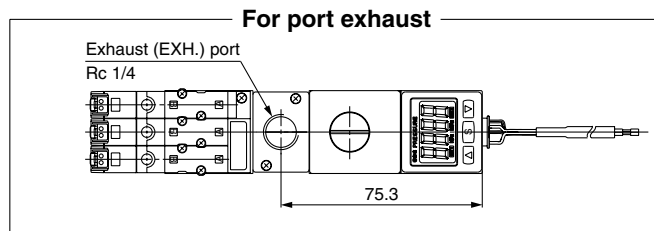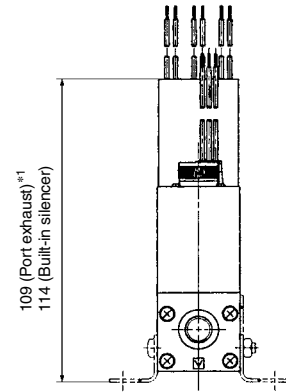

ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY □
ZF □
ZP □
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP


HEP






Related
Equipment

Large Size Vacuum Module: Ejector System **Series ZR**





Nozzle dia./ $\phi 1.8$, $\phi 2.0$

ZR1¹⁸₂₀□1-E□□

 Note) * 1 Dimensions for mounting bracket A
* 2 Dimensions for mounting spacer A
Bracket A part no.: P3270153#1
(Standard accessory)
Spacer A part no.: P3270156#1

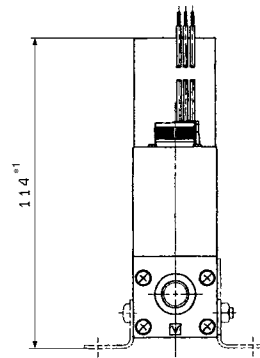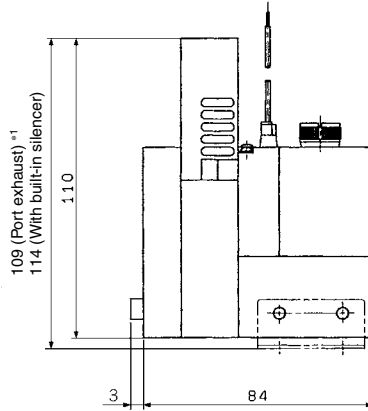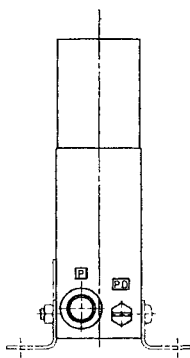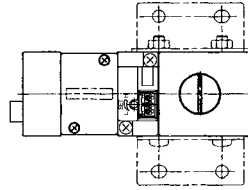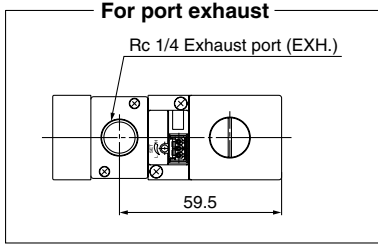

ZR1¹⁸₂₀-D□□□

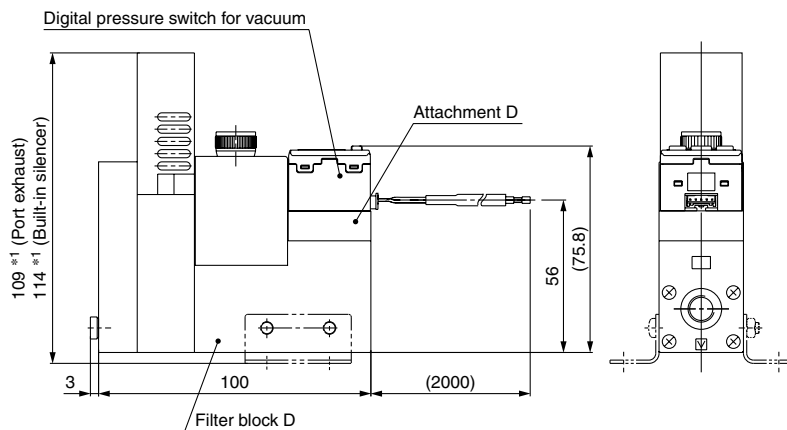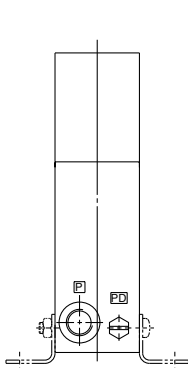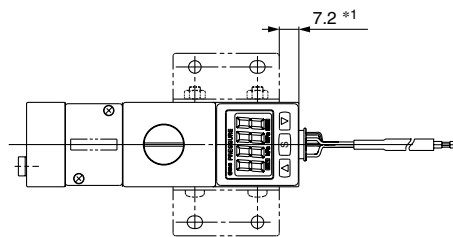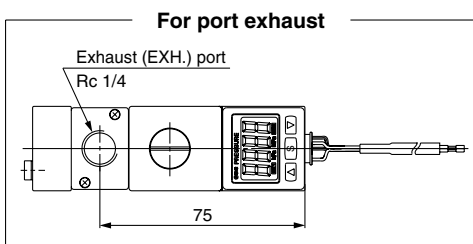

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV


AEP

HEP

Related
Equipment

★ Dimensions not indicated are identical to the top drawing.

Ejector System/Manifold Specifications

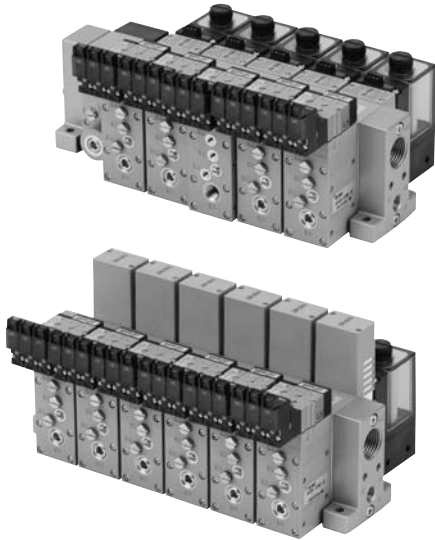

Specifications

Max. number of units	Max. 6 stations
Port	Port size
Common air pressure supply port (PV)	1/8 (Rc, NPTF, G)
Common pilot pressure supply port (PS)	M5
Common release pressure supply port (PD)	M5
Common exhaust port (EXH)	1/2 (Rc, NPTF, G)
Mass	Basic mass for one station is 0.28 kg. Additional mass per one station is 0.12 kg.

- (1) When using 3 or more stations with ZR120□□ manifold, utilize PV port as supply port on both sides.
 (2) When using 3 or more stations with ZR120□ 3 manifold, utilize EXH port as exhaust port on both sides.

Manifold Air Supply

Supply port location	Left			Right		
	PV	PS	PD	PV	PS	PD
L (Left side)	○	○	○	●	●	●
R (Right side)	●	●	●	○	○	○
B (Both sides)	○	○	○	○	○	○

Air supply to ○ port
 BLANK plug attached to ● port
 Note) BLANK plug is attached on all ports of valve unit.

Individual Spacer

Part no.	Port	Function
ZR1-R1	PV	Possible to set the air supply pressure individually
	PS	Possible to set the pilot valve air supply pressure individually
	PD	Possible to set the release valve supply pressure individually
	PE	Possible to set the pilot valve exhaust individually

Individual spacer is used when the connecting port of each unit is not common for the manifold connecting port. Mixed specifications of common and individual unit connecting ports for each unit is possible on manifolds with this individual spacer.

How to Order Manifold

<Manifold base>

ZZR1 06 - R

Stations	Port location
01 1	R Right side
⋮ ⋮	L Left side
06 6	B Both sides
Thread type	
Nil Rc	
F G (Note)	
T NPTF	

Note) The thread ridge shape is compatible with the G thread standard (JIS B 0203), but other shapes are not conforming to ISO16030 and ISO1179.

Example 1)
 ZZR106-R 1 pc. (Manifold base only)
 * ZR120S1-K15MZ-EC ... 5 pcs. (Unit)
 * ZR1-BM1 1 pc. (Blank plate)
 * ZR1-R1-3 1 pc. (Individual spacer)

• With reference from valve side, the third station from right side

<Function plate>

ZR1 - RV 1 - 1

Piping specifications				
Symbol	Symbol	PV port	PS port	PD port
1	PV↔PS↔PD	Common		
2	PV↔PS·PD	Common	Individual	

Arrangement (Right valve station which is looked from valve side is first station.)

1	1 station only
⋮	⋮
6	6 stations only
A	All stations

* When the spacers are attached to the specified locations, specify all spacers.

Example 2) Attached to the first and third stations

*ZR1-RV1-1
 *ZR1-RV1-3
 *ZR1-R1-A-3

↑ Fill the number

<Individual spacer>

ZR1 - R1 - 1

R16

Refer to "About individual spacer."

Arrangement (Right valve station which is looked from valve side is first station.)

1	1 station only
⋮	⋮
6	6 stations only
A	All stations

* When the spacers are attached to the specified locations, specify all spacers.

Example) Attached to the first and third stations
 *ZR1-R1-1
 *ZR1-R1-3

⚠ Caution when ordering manifold

- The asterisk denotes the symbol for assembly. Prefix it to the ejector part numbers to be mounted.
- When it is not added, the manifold base and ejector are shipped separately.

About individual spacers

- In the right table, ports with the symbol ↑ mean that they are manifold supply, while others are individual supply from the valve unit.
- Symbols in the right table are printed on the surface of individual spacers.

Part no.	Symbol	Part no.	Symbol
ZR1-R1	R1	ZR1-R9	R9 ↑PV
-R2	R2 ↑PE	-R10	R10 ↑PV ↑PE
-R3	R3 ↑PD	-R11	R11 ↑PV ↑PD
-R4	R4 ↑PD ↑PE	-R12	R12 ↑PV ↑PD ↑PE
-R5	R5 ↑PS	-R13	R13 ↑PV ↑PS
-R6	R6 ↑PS ↑PE	-R14	R14 ↑PV ↑PS ↑PE
-R7	R7 ↑PS ↑PD	-R15	R15 ↑PV ↑PS ↑PD
-R8	R8 ↑PS ↑PD ↑PE	-R16	R16 ↑PV ↑PS ↑PD ↑PE


<Blanking plate>

ZR1 - BM1

Refer to Example 1).


Manifold/System Circuit Example

When not using individual spacer

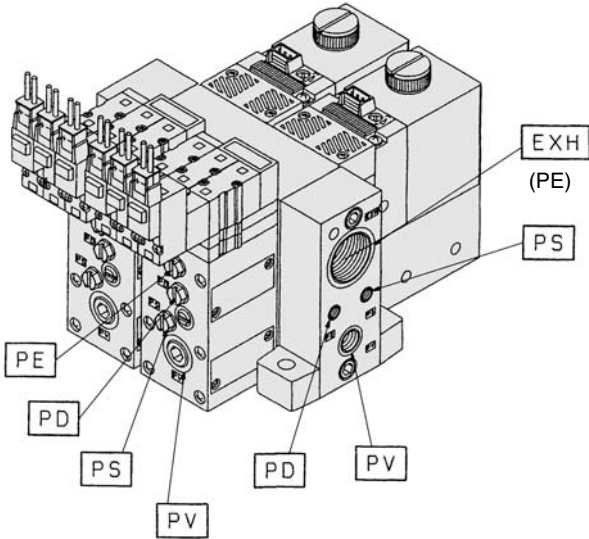


PV: Air pressure supply port
PS: Pilot pressure supply port
PD: Release pressure supply port
PE: Pilot pressure exhaust port
EXH: Common exhaust port
V: Vacuum Port

When using individual spacer

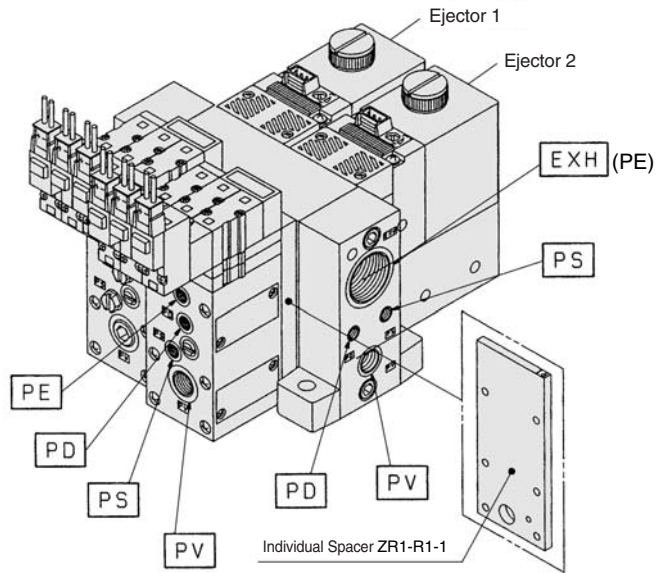


PV: Air pressure supply port
PS: Pilot pressure supply port
PD: Release pressure supply port
PE: Pilot pressure exhaust port
EXH: Common exhaust port
V: Vacuum Port

<System circuit example>

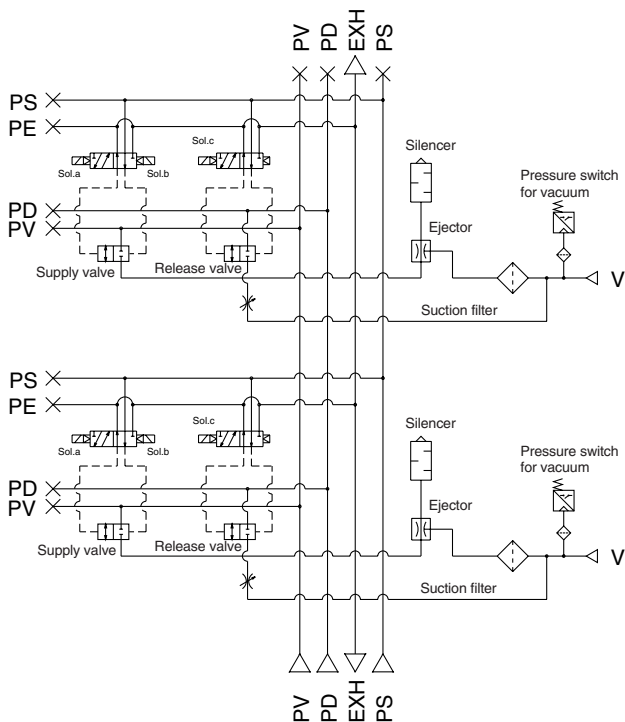


<System circuit example>

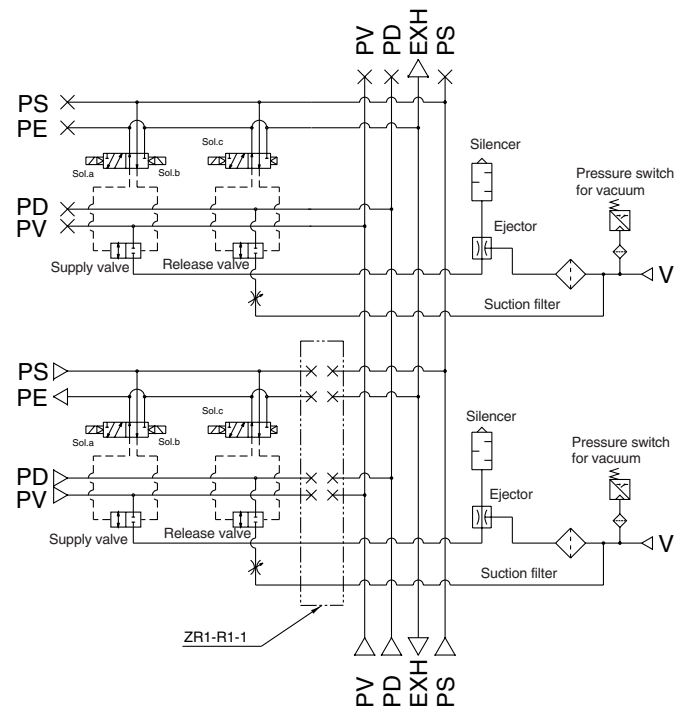

ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

Series ZR

Ejector System



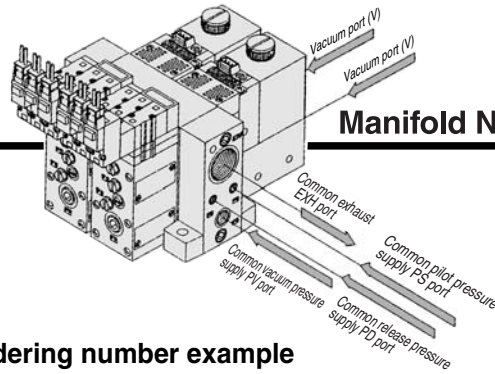


Manifold Nozzle Dia./ ϕ 1.0, ϕ 1.3, ϕ 1.5

4 stations manifold: Ordering number example

- ZZR104-□□1pc. (Manifold base)
- * ZR1□□21pc. (Port exhaust type)
- * ZR1□□1-EC1pc. (Single unit)
- * ZR1□□1-K1□M□□1 pc. (Single unit)
- * ZR1□□1-K1□M□-D□□□ ...1pc. (Single unit)
- * ZR1-RV1-41pc. (Function plate)
- * ZR1-R1-41pc. (Individual spacer)

A: Release flow rate adjusting needle with lock nut

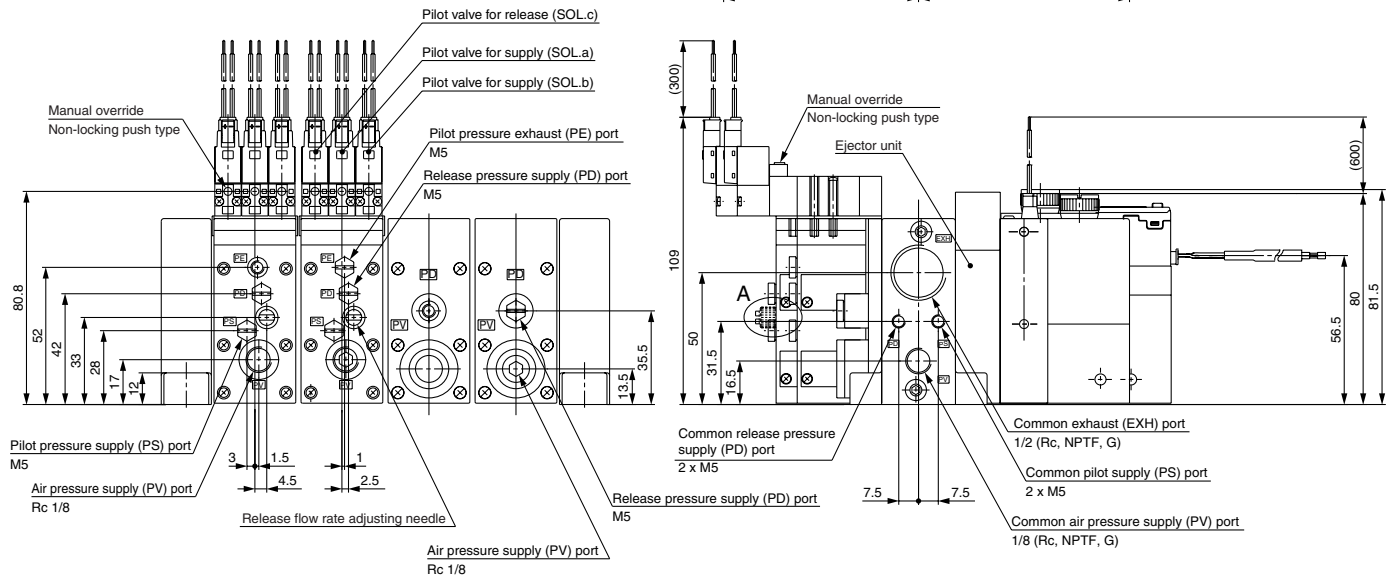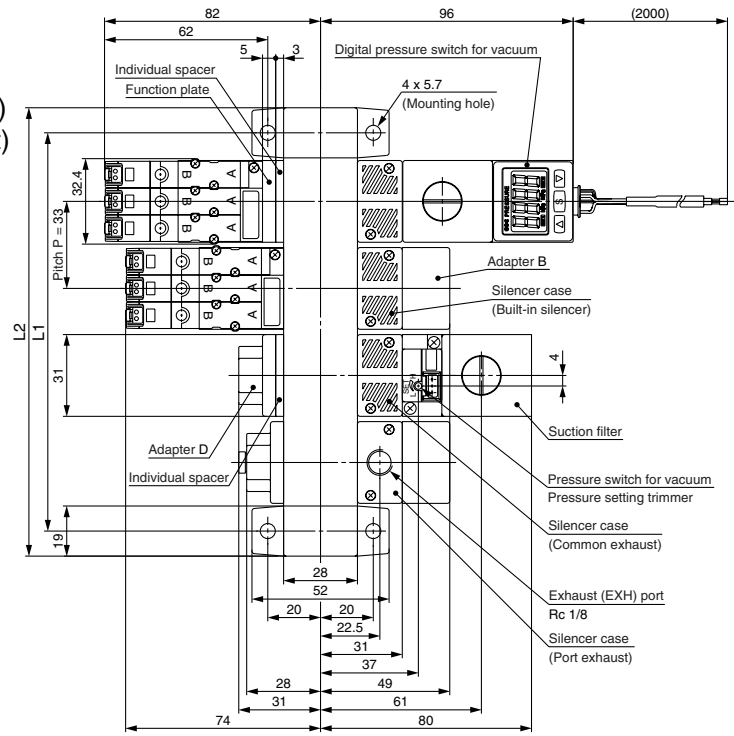



* 1 The common exhaust port (EXH.) is also used as the pilot pressure exhaust (PE) port of the pilot valve. Use while the port is open to the atmosphere.

		(mm)					
Symbol	Stations	1	2	3	4	5	6
L1		52	85	118	151	184	217
L2		71	104	137	170	203	236

Large Size Vacuum Module: Ejector System **Series ZR**

Circuit diagram

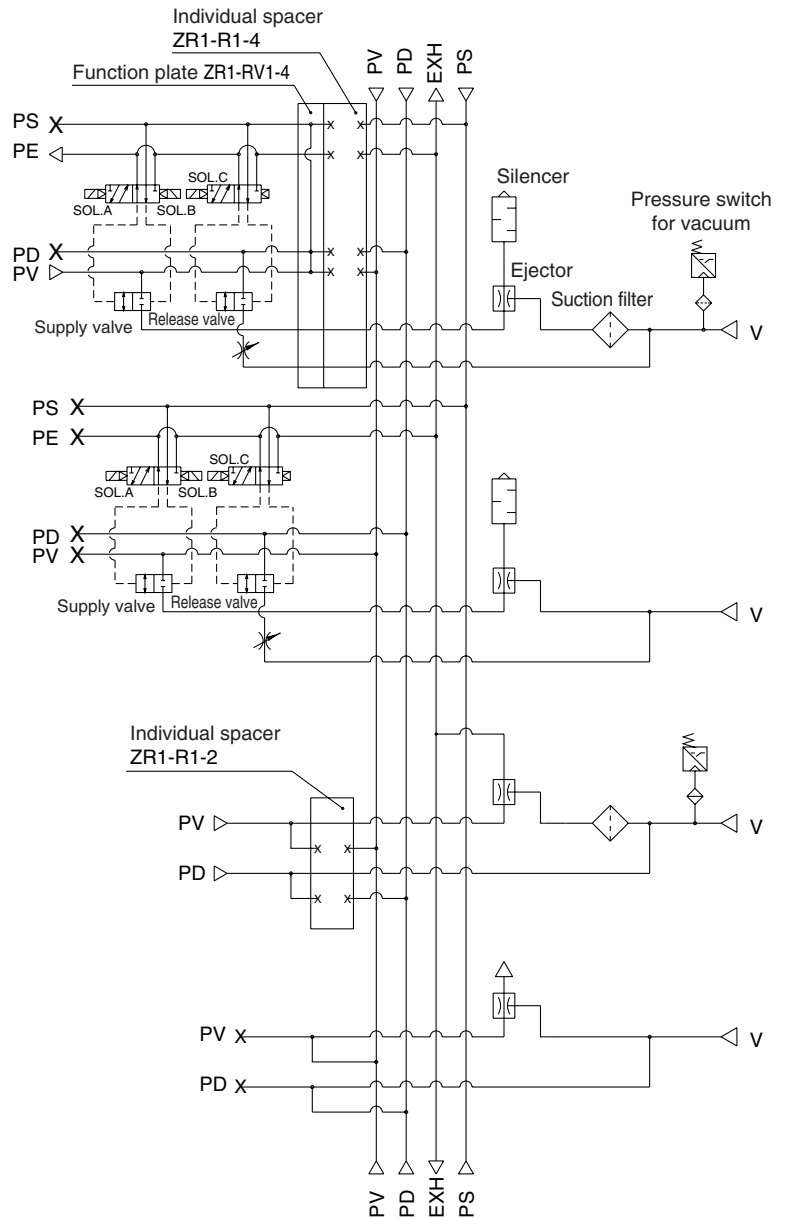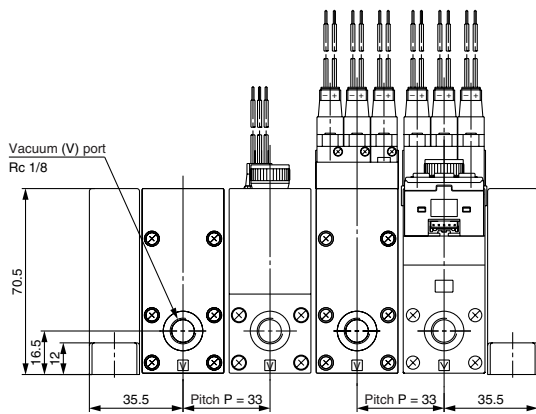

PV: Air pressure supply port
PS: Pilot pressure supply port
PD: Release pressure supply port
PE: Pilot pressure exhaust port
EXH: Exhaust port
V: Vacuum Port

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV


AEP

HEP

Related
Equipment

Series ZR




Ejector System

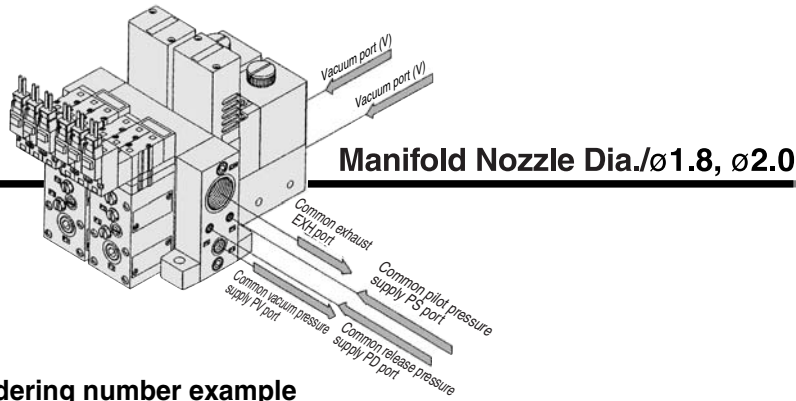

4 stations manifold: Ordering number example

- ZZR104-□□1pc. (Manifold base)
- * ZR1□□21pc. (Port exhaust type)
- * ZR1□□1-EC1pc. (Single unit)
- * ZR1□□1-K1□M□□1 pc. (Single unit)
- * ZR1□□1-K1□M□-D□□□ ...1pc. (Single unit)
- * ZR1-RV1-41pc. (Function plate)
- * ZR1-R1-41pc. (Individual spacer)



A: Release flow rate adjusting needle with lock nut

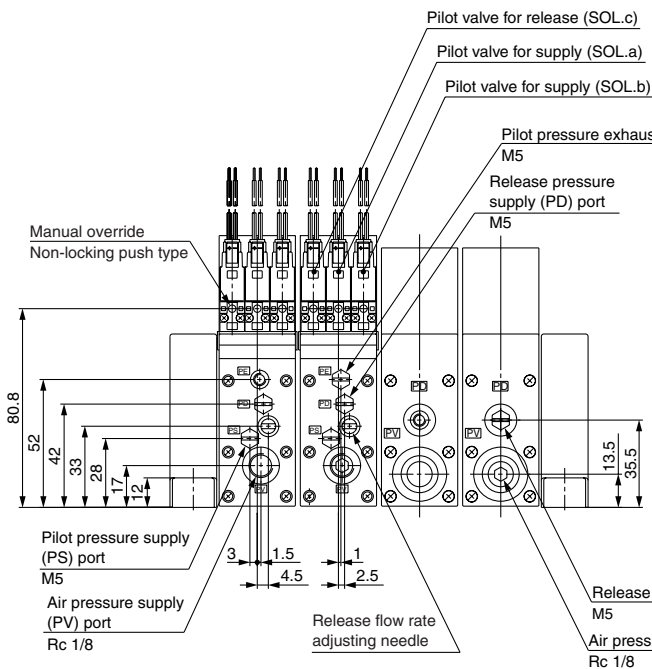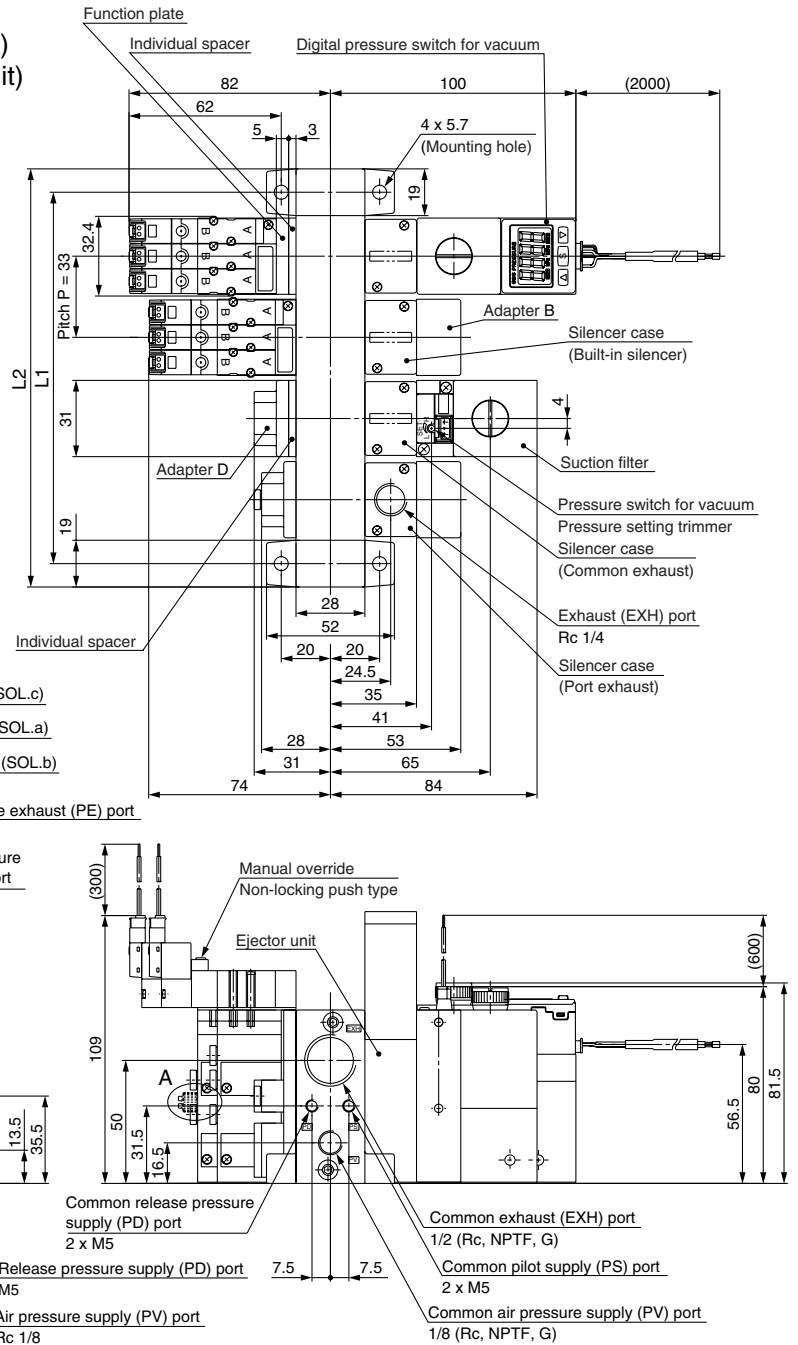

* 1 The common exhaust port (EXH.) is also used as the pilot pressure exhaust (PE) port of the pilot valve. Use while the port is open to the atmosphere.

		(mm)					
Symbol	Stations	1	2	3	4	5	6
L1		52	85	118	151	184	217
L2		71	104	137	170	203	236

Circuit diagram

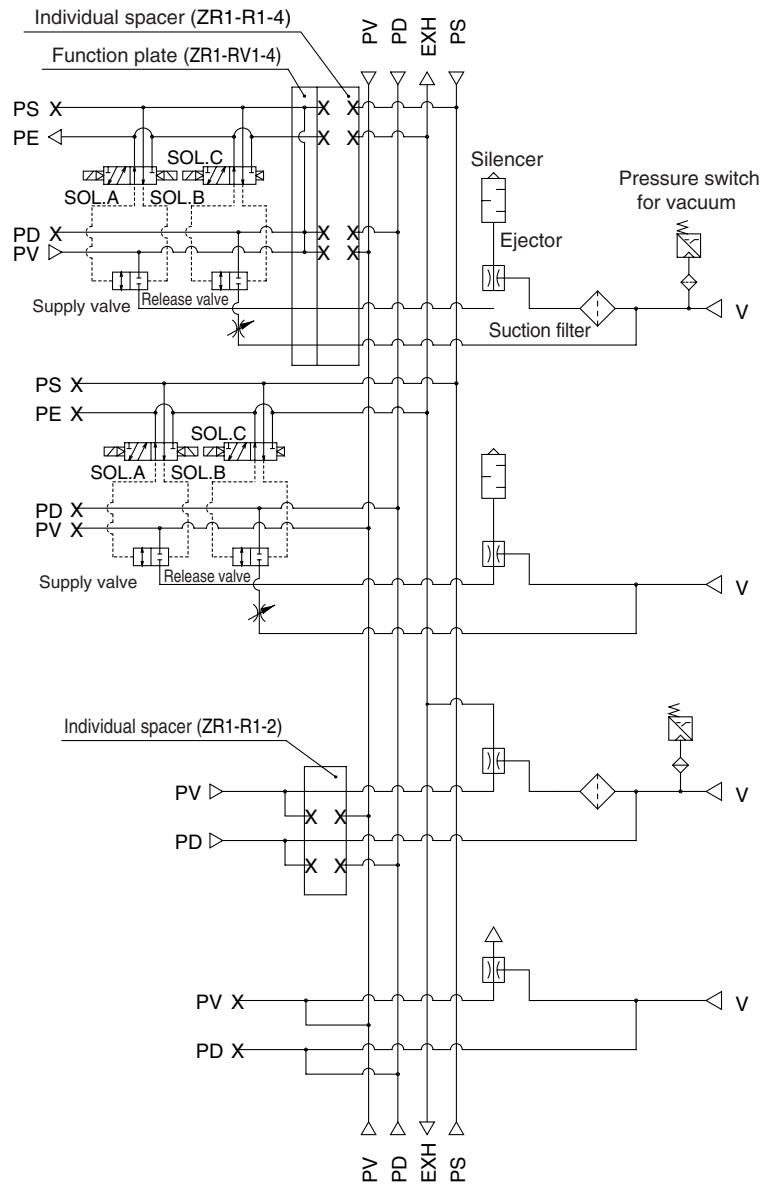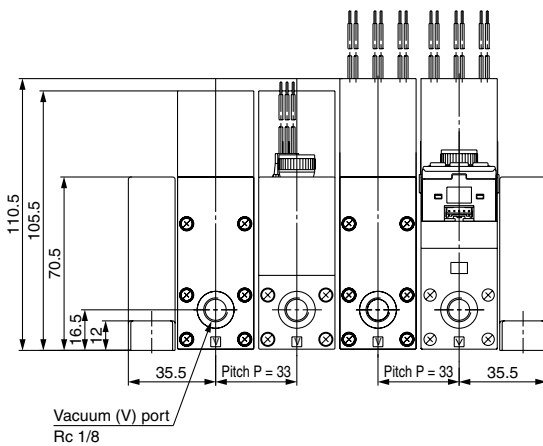

PV: Air pressure supply port
PS: Pilot pressure supply port
PD: Release pressure supply port
PE: Pilot pressure exhaust port
EXH: Common exhaust port
V: Vacuum Port

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

HEP

Related Equipment

Large Size Vacuum Module: Vacuum Pump System Series ZR




How to Order

Note for model selection

Take function plates into consideration.
(Refer to page 971.)

Components



ZR100 -

K1

5

M

Z

Combination of supply switch valve and release valve
Refer to "Table (1)".

Pilot valve

Solenoid valve rated voltage

Electrical entry

Light/Surge voltage suppressor

Manual override

Combination of switch/filter

Output specifications

Unit specifications

Lead wire specifications

Release flow rate adjusting needle

Combination of vacuum valve and release valve

Refer to "Table (1)" in page 969 for details.

Caution

When using AC, the DC solenoids are operated via a rectifier. Therefore, make sure to combine the connector assembly equipped with a rectifier with the exclusive solenoids. Using other combinations could lead to burned coils or other malfunctions.

Solenoid valve rated voltage

Nil	Air operated
5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC
D1 (Note)	100 VAC (50/60Hz)
D2 (Note)	110 VAC (50/60Hz)

Note) CE marked products are not available for "D1" and "D2".

Pilot valve

Nil	DC: 1 W (With indicator light: 1.05 W)
	AC
Y*	DC: 0.45 W (With indicator light: 0.5 W)

* Only 24 VDC and 12 VDC are applicable to 0.45 W.

Electrical entry

Nil	Air operated
-----	--------------

For 24, 12, 6, 5, 3 VDC

L	Plug connector type	Lead wire length 0.3 m
LN		Without lead wire (Applicable to only DC)
LO	Plug connector type	Without connector
M		Lead wire length 0.3 m
MN	Plug connector type	Without lead wire (Applicable to only DC)
MO		Without connector
G	Grommet type	Lead wire length 0.3 m (Applicable to only DC)
H		Lead wire length 0.6 m (Applicable to only DC)

100, 110 VAC (With rectifier)

L	Plug connector type	Lead wire length 0.3 m
M	Plug connector type	Lead wire length 0.3 m

Refer to "Table (2)" on page 969 for part no. of lead wire with connector.

Light/Surge voltage suppressor

Nil	None
Z	With light/surge voltage suppressor
S	With surge voltage suppressor

* DC voltage: Be much careful about polarity, because it is incorrect at DC (surge voltage suppressor), diode or switching element may be damaged.
AC voltage: S is not available for AC.

Manual override

Nil	Non-locking push type
B	Locking slotted type

Combination of switch/filter

Nil	None
D	Digital pressure switch for vacuum (ZSE30A) + Filter
E	Pressure switch for vacuum (ZSE2) + Filter
F	Filter

CE compliant

Nil	—
Q	CE marked

Release flow rate adjusting needle

Nil	Without lock nut
L	With lock nut

Lead wire specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

Nil	Without lead wire
L	Lead wire with connector (Length 2 m)

Refer to "Table (4)" on page 969 for part no. of lead wire with connector.

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	Grommet/Lead wire (Length 0.6 m)
L	Grommet/Lead wire (Length 3 m)
C	Lead wire with connector (Length 0.6 m)
CL	Lead wire with connector (Length 3 m)
CN	With connector/Without lead wire

Refer to "Table (3)" on page 969 for part no. of lead wire with connector.

Filter specifications (F)

Nil	No setting
-----	------------

Unit specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

Nil	With unit switching function
M	SI unit only
P	With unit switching function (Initial value psi)

Note 1) This is no longer sold for use in Japan due to the Weight and Measure Act (implemented October, 1999).
Note 2) Fixed unit: kPa

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	No setting
-----	------------

Filter specifications (F)

Nil	No setting
-----	------------

Output specifications

Digital pressure switch for vacuum (ZSE30A) specifications (D)

N	NPN open collector 1 output
P	PNP open collector 1 output
A	NPN open collector 2 outputs
B	PNP open collector 2 outputs
C	NPN open collector 1 output + Analog voltage output
D	NPN open collector 1 output + Analog current output
E	PNP open collector 1 output + Analog voltage output
F	PNP open collector 1 output + Analog current output

Pressure switch for vacuum (ZSE2) specifications (E)

Nil	NPN open collector 1 output
55	PNP open collector 1 output

Filter specifications (F)

Nil	No setting
-----	------------

Table (1) Valve Unit/Combination of Vacuum Switch Valve and Release Valve

Valve unit function			Valve unit components		Symbol	Supply valve				Release valve			
Operation stop	Vacuum adsorption	Vacuum release	Supply valve	Release valve		Solenoid valve			Air operated (VJA3130)	Solenoid valve			Air operated (VJA3130)
						Double SOL. (VJ3233-X17)	Double SOL. (VJ3233-X18)	N.C. (VJ3133)		Double SOL. (VJ3233-X17)	Double SOL. (VJ3233-X18)	N.C. (VJ3133)	
○	◎	○	Double SOL. (VJ3233-X17)	N.C. (VJ3133)	K1	●	—	—	—	—	—	●	—
○	○	○	N.C. (VJ3133)	N.C. (VJ3133)	K2	—	—	●	—	—	—	●	—
○	○	○	Air operated (VJA3130)	Air operated (VJA3130)	K3	—	—	—	●	—	—	—	●
×	○	○	N.C. (VJ3133)		C1	—	—	●	—	—	—	(Common with supply valve)	—
×	○	○	Air operated (VJA3130)		C2	—	—	—	●	—	—	—	(Common with supply valve)
×	○	○	N.O. (VJ3133)		C3	—	—	●	—	—	—	(Common with supply valve)	—
×	◎	◎	Double SOL. (VJ3233-X18)		C4	—	●	—	—	—	—	(Common with supply valve)	—
○: Possible ○: Possible with limitations (without self-holding function) ×: Not possible					Nil	Without valve module							

Table (2) How to Order Valve Plug Connector Assembly

DC	VJ10 - 20 - 4A - □
100 VAC (with rectifier)	VJ10 - 36 - 1A - □
110 VAC (with rectifier)	VJ10 - 36 - 3A - □

Lead wire length	
Nil	300 mm (Standard)
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm

How to order

When requiring a vacuum unit equipped with valves with lead wires of 600 mm or more, specify the vacuum module valves without the standard connectors and order the required connector ass'y's separately.

Example) ZR100-K15M□Z-EC (-Q) 1 pc.
* VJ10-20-4A-6 3 pcs.

Table (3) Pressure Switch for Vacuum/Lead Wire with Connector

ZS - 10 - 5A - □

Lead wire length	
Nil	0.6 m
30	3 m
50	5 m

How to order

When requiring a vacuum switch with a lead wire of 5 m, indicate the part numbers of the vacuum unit switch without a lead wire with connector and the 5 m lead wire connector separately.

Example) ZR100-□□□□□□-□CN (-Q) 1 pc.
* ZS-10-5A-50 1 pc.

Table (4) Digital Pressure Switch for Vacuum/Lead Wire with Connector

ZS - 38 - 3 L


Lead wire core	
3	3 cores, 1 output, 2 m (Output specifications: N, P)
4	4 cores, 2 outputs, 2 m (Output specifications: A, B, C, D, E, F)

ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

Vacuum Pump System/Combination of supply valve and release valve

Combination Symbol : K1

Feature : Double solenoid vacuum valve allows for self-holding.

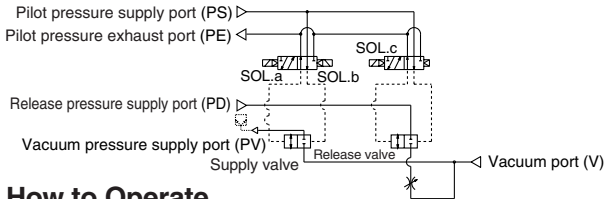


How to Operate

Operation	Pilot valve operation			Note
	Supply valve	Release valve	Note	
1. Adsorption	SOL.a	SOL.b	SOL.c	When power supply is cut off while the supply valve is ON, the operational state is held.
2. Vacuum release	OFF	ON	ON	
3. Operation stop	OFF	ON	OFF	

Combination Symbol : K2

Feature: Single solenoid valve is provided for vacuum valve.

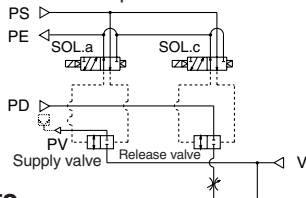


How to Operate

Operation	Pilot valve operation		Note
	Supply valve	Release valve	
1. Adsorption	SOL.a	SOL.c	When power supply is stopped, all operations will be stopped.
2. Vacuum release	OFF	ON	
3. Operation stop	OFF	OFF	

Combination Symbol : K3

Feature: Operation can be controlled by an external pilot valve.

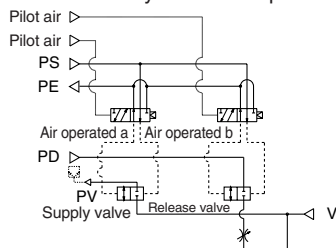

How to Operate


Operation	Pilot valve operation		Note
	Supply valve	Release valve	
1. Adsorption	Air operated a	Air operated b	The product is used under the environment in which solenoid valves cannot be used or when the centralized control is applied using external pilot air.
2. Vacuum release	OFF	ON	
3. Operation stop	OFF	OFF	

⚠ Caution

When pipe connection is made to two port connections (PV port, PD port) only, use a function plate (ZR1-RV3). Refer to page 971 for further information.

Combination Symbol : C1

Feature: Adsorption of workpieces (when energized) and release of vacuum (when de-energized) are switched by single solenoid valve.

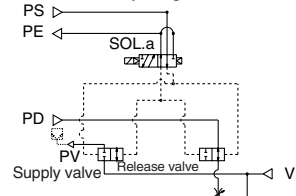


How to Operate

Operation	Pilot valve operation		Note
	Supply valve/Release valve	Note	
1. Adsorption	SOL.a	Be careful for blowing off of workpieces or displacement of adsorption position in case of small and/or lightweight workpieces.	
2. Vacuum release	OFF		

Combination Symbol : C2

Feature: Adsorption of workpieces and release of vacuum are switched by an external pilot valve.

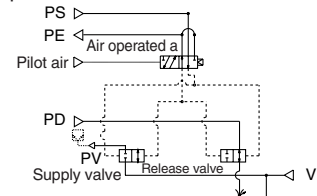


How to Operate

Operation	Pilot valve operation		Note
	Supply valve/Release valve	Note	
1. Adsorption	Air operated a	Be careful for blowing off of workpieces or displacement of adsorption position in case of small and/or lightweight workpieces.	
2. Vacuum release	OFF		

Combination Symbol : C3

Feature: Adsorption of workpieces (when de-energized) and release of vacuum (when energized) are switched by the single solenoid

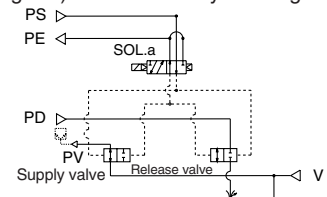


How to Operate

Operation	Pilot valve operation		Note
	Supply valve/Release valve	Note	
1. Adsorption	SOL.a	Be careful for blowing off of workpieces or displacement of adsorption position in case of small and/or lightweight workpieces.	
2. Vacuum release	OFF		

Combination Symbol : C4

Feature: Adsorption of workpieces and release of vacuum are switched by double solenoid valve.

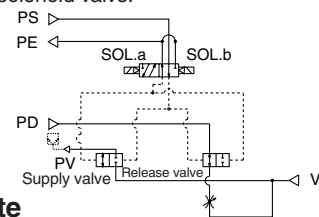

How to Operate


Operation	Pilot valve operation		Note
	Supply valve/Release valve	Note	
1. Adsorption	SOL.a	SOL.b	When power supply is stopped vacuum valve/vacuum release valve will hold the operation.
2. Vacuum release	OFF	ON	

Function Plate : ZR1-RV3

A function plate is used when each connecting port for the valve unit is common. If a function plate is not used (standard), make individual pipe connections to PV, PS, and PD ports respectively.


Without Function Plate (Standard)

Applicable system: Ejector system
External vacuum supply system

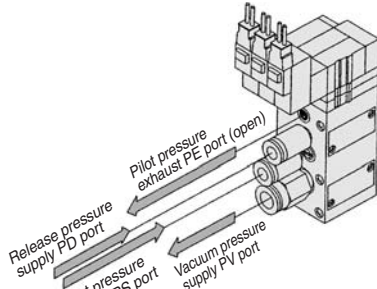

Pipe connection


Example of circuit diagram

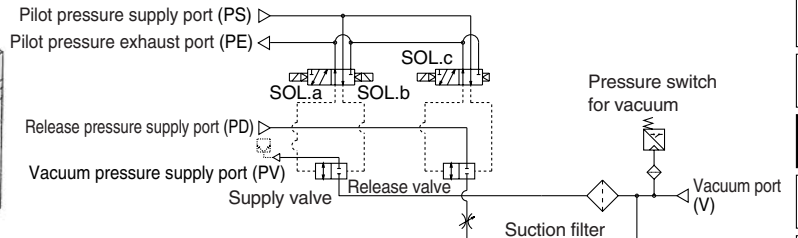

With Function Plate/Applicable to Vacuum Pump System Only


When ZR1-RV3 (PV/PS↔PD) is Selected

Since compressed air is necessary to operate pilot valve in vacuum pump system, supply air to PD port (or PS port).

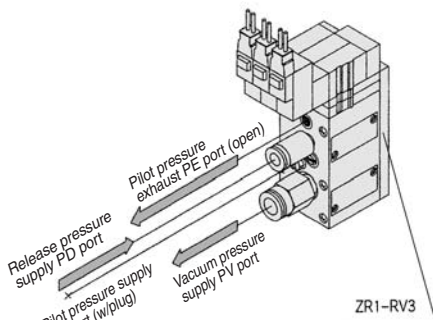

Pipe connection

Example of circuit diagram

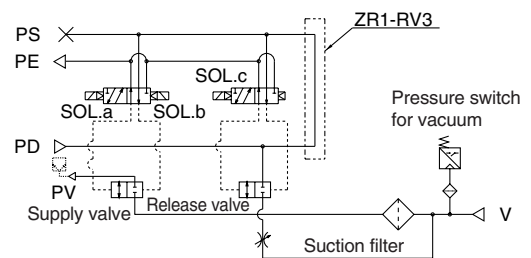

How to Order Function Plate Unit (For Pump System)

ZR1 - RV 3

• Piping specifications

Symbol	Symbol	PV port	PS/PD port
3	PV/PS ↔ PD	Individual	Common

How to order

Indicate the model numbers of the vacuum module and the function plate.

Example) ZR100-K15MZ-E 1
* ZR1-RV3 1



⚠ Caution

Length of assembling screw varies when adding function plate. Order from the mounting thread parts list for unit combination on page 983. Order a plug (M-5P) separately in order to plug the PD and PS ports that are no longer used due to the addition of function plate.

ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

Series ZR

Valve Unit : ZR1-V

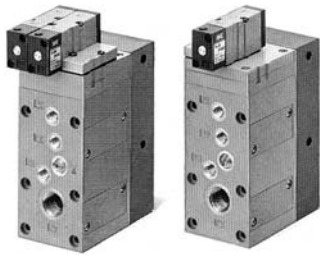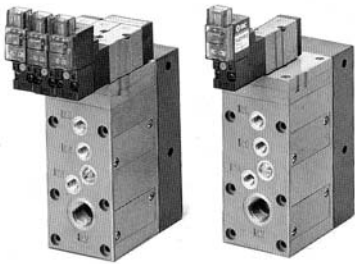

Specifications

Valve unit part no.	ZR1-V □□□□□	
Components	Supply valve	Release valve
Operating method	Pilot operated	Pilot operated
Combination of supply valve and release valve	Refer to the combination of supply valve and release valve below.	
PV port supply pressure	-0.1 to 0.6 MPa	
PD port supply pressure	0.05 to 0.6 MPa	
PS port supply pressure	0.25 to 0.6 MPa	
Main valve effective area (mm²)	8.2	0.96
Main valve effective area (Cv)	0.45	0.053
Maximum operating frequency	5 Hz	
Operating temperature range	5 to 50°C	

Standard accessory - Bracket B

Solenoid Valve/Specifications


Solenoid	VJ3133-□□□□, VJ3233-□□□□-X17, VJ3233-□□□□-X18
Rated voltage	24, 12, 6, 5, 3 VDC, 100*, 110* VAC (50/60 Hz)
Electrical entry	100, 110 VAC-L/M plug connector (With rectifier) 3, 5, 6, 12, 24 VDC-L/M plug connector, Grommet
Light/Surge voltage suppressor	Available, Not available (at grommet)
Manual operation	Non-locking push type, Locking slotted type


* Applicable to plug connector; connector assembly with rectifier is attached.

Combination of Supply Valve and Release Valve

Combination symbol	Vacuum switch valve	Release valve	Mass (kg)
K1	Double SOL. (VJ3233-X17)	N.C. (VJ3133)	0.245
K2	N.C. (VJ3133)	N.C. (VJ3133)	0.213
K3	Air operated VJA3130	Air operated VJA3130	0.194
C1	N.C. (VJ3133)		0.187
C2	Air operated VJA3130		0.174
C3	N.C. (VJ3133)		0.184
C4	Double SOL. (VJ3233-X18)		0.214

* Weight includes Bracket B. (Solenoid valve: 24 VDC, M plug connector type)

How to Order  Refer to page 968 for further part no. information.

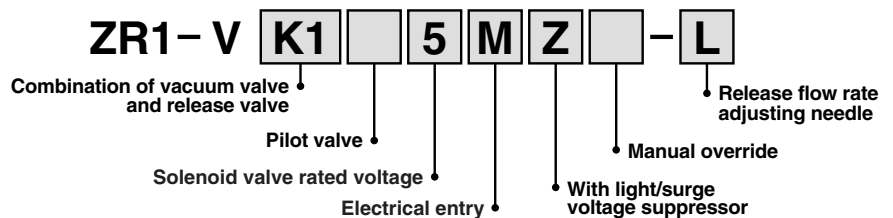

Vacuum Pressure Switch Unit/Digital Pressure Switch for Vacuum : ZSE30A-00-□-□□□-X505



Specifications

Rated pressure range	0.0 to -101.0 kPa	
Set pressure range	10.0 to -105.0 kPa	
Withstand pressure	500 kPa	
Applicable fluid	Air, Non-corrosive gas, Non-flammable gas	
Power supply voltage	12 to 24 VDC ±10% (with power supply polarity protection)	
Current consumption	40 mA (at no load)	
Switch output	NPN or PNP open collector 1 output NPN or PNP open collector 2 outputs (selectable)	
Hysteresis	Hysteresis mode	Variable (0 to variable)
	Window comparator mode	
Display	4-digit, 7-segment, 2-color LCD (Red/Green) Sampling cycle: 5 times/sec.	
Display accuracy	±2% F.S. ±1 digit (Ambient temperature of 25°C)	
Environment resistance	Enclosure	IP40
	Operating temperature range	Operating: 0 to 50°C, Stored: -10 to 60°C (No freezing or condensation)
	Operating humidity range	Operating/Stored: 35 to 85% RH (No condensation)
	Withstand voltage	1000 VAC for 1 minute between live parts and case
Temperature characteristics	±2% F.S. (Based on 25°C)	

Note 1) When analog voltage output is selected, analog current output cannot be used together.

Note 2) When analog current output is selected, analog voltage output cannot be used together.

Refer to page 952 for further specifications.

Vacuum Pressure Switch : ZSE2-0R-□□



Refer to page 949 for further specifications.

Specifications

Pressure switch for vacuum part no.	ZSE2-0R-15□	ZSE2-0R-55□
Fluid	Air	
Setting pressure range	0 to -101 kPa	
Hysteresis	3% F.S. or less	
Temperature characteristics (25°C standard)	± 3% F.S. or less	
Operating voltage	12 to 24 VDC (Ripple ±10% or less)	
Output	NPN Open collector 30 V, 80 mA	PNP Open collector 80 mA
Indicator light	Lights up when ON	
Current consumption	17 mA or less (when 24 VDC is ON)	
Proof pressure (Max. operating pressure)	0.5 MPa *	
Operating temperature range	5 to 50°C	

* When using the ejector system, instantaneous pressure up to 0.5 MPa will not damage the switch.



Note) Operation outside of the maximum operating pressure and operating temperature range may cause a serious accident or damage.

Pressure Switch for Vacuum/Suction Filter Unit : ZR1-F□□□□



Refer to page 953 for further specifications.

Specifications

Unit no.		ZR1-F□□□□
Suction filter	Operating pressure range	Vacuum to 0.5 MPa
	Operating temperature range	5 to 50°C
	Filtration efficiency	30 μm
Filter media		PVF
Pressure switch for vacuum		Refer to pages 949 and 952 regarding pressure switch for vacuum.
Standard option		Bracket A



Note) Operation outside of the operating pressure and operating temperature range may cause a serious accident or damage.

Filter case

⚠ Caution

- ① The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, watersoluble cutting oil (alkalinic), etc.
- ② Do not expose it to direct sunlight.

Suction Filter : ZR1-FX



Refer to page 955 for further specifications.

Specifications

Model	ZR1-FX
Operating pressure range	Vacuum to 0.5 MPa
Operating temperature range	5 to 50°C
Filtration efficiency	30 μm
Filter media	PVF
Mass (with bracket)	0.1 kg



Note) Operation outside of the operating pressure and operating temperature range may cause a serious accident or damage.

Filter case

⚠ Caution

- ① The case is made of polycarbonate. Therefore, do not contact it or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, watersoluble cutting oil (alkalinic), etc.
- ② Do not expose it to direct sunlight.

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ


AMV

AEP

HEP

Related Equipment

Construction

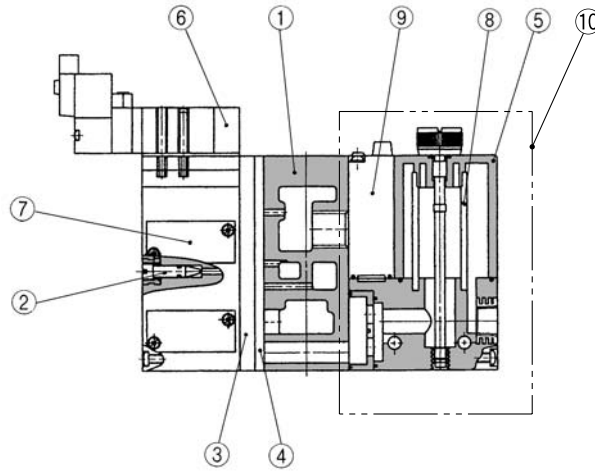

Components Parts

No.	Description	Material	Note
①	Manifold base	Aluminum	
②	Release flow rate adjusting needle	Stainless steel	Refer to Note 2)
③	Function plate	PBT	→ Refer to page 978.
④	Individual spacer	PBT	→ Refer to page 978.
⑤ ⁽¹⁾	Filter case	Polycarbonate	ZR1-FC-PC (Assembly part no.:ZR1-FC-PC-AS)



Note 1) Precautions on handling the filter case

1. The case is made of polycarbonate. Therefore, do not contact it or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water soluble cutting oil (alkalinic), etc.

2. Do not expose it to direct sunlight.

Note 2) Turning the release flow rate adjusting needle 4 full turns from the fully closed position renders the needle valve fully open. Do not turn more than four times since turning excessively may cause the needle fall off. In order to prevent the needle from loosening and falling out, a release flow rate adjusting needle with lock nut is available.

Replacement Parts

No.	Description	Material	Part No.
⑥	Pilot valve assembly	—	→ Refer to Table (1)
⑦	Valve body assembly	—	→ Refer to Table (2)
⑧	Filter element	PVF	ZR1-FZ (30 μm)
⑨	Pressure switch for vacuum	—	ZSE2-OR-15-□ ZSE30A-00-□-□□□-X505
⑩	Filter switch unit for replacement	—	ZR1-F□□□□-D

How to Order Solenoid Valves/Air Operated Valves


Air operated

ZR1-VJA3130

Solenoid valve

ZR1-VJ3233 □ - 5 M Z □ - X17
X18

ZR1-VJ3133 □ - □ - □ - □ - □

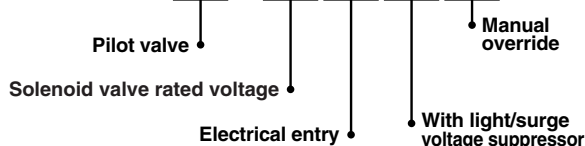


Refer to page 968 for further symbol specifications.

Note) Pilot valve gasket is included. (ZR1-PVG-1 or ZR1-PVG-2)

Table (1) How to Order Pilot Valves


Symbol	Components		Model
	Supply valve	Release valve	
K1	Double solenoid valve N.C. (VJ3233)	Single solenoid valve N.C. (VJ3133)	→ Refer to "How to Order" below. Supply:ZR1-VJ3233- □□□□-X17 Release:ZR1-VJ3133- □□□□
C4	Double solenoid valve N.O. (VJ3233)	Double solenoid valve N.O. (VJ3233)	→ Refer to "How to Order" below. Supply:ZR1-VJ3233- □□□□-X18 Release:ZR1-VJ3233- □□□□-X18
K3	Air operated N.C (VJA3130)	Air operated N.O (VJA3130)	ZR1-VJA3130

Table (2) How to Order Valve Body Assembly

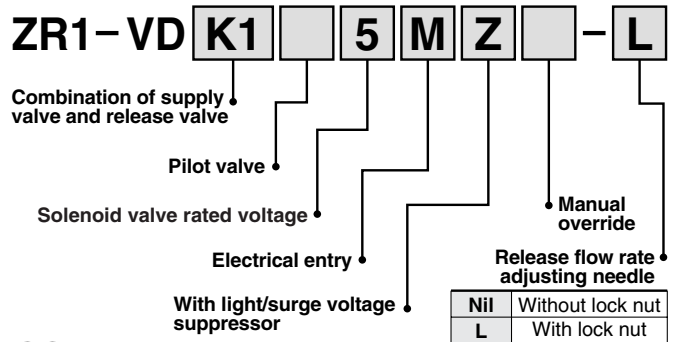

Refer to page 968 for further symbol specifications.


Table (3) Pressure Switch for Vacuum + Suction Filter Unit

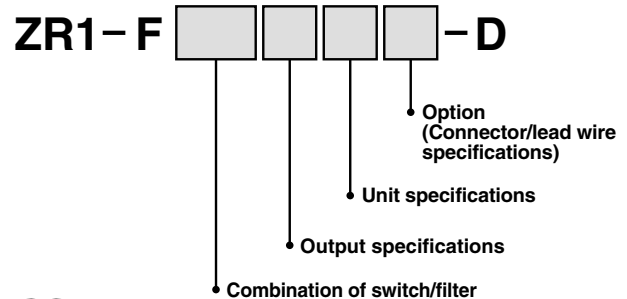

Refer to page 953 for further symbol specifications.

Large Size Vacuum Module: Vacuum Pump System **Series ZR**


Complete Unit

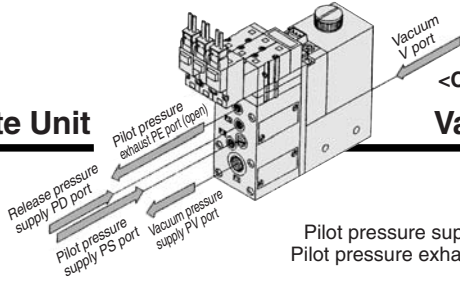

<Components>

Valve + Pressure Switch for Vacuum + Filter Unit

Circuit diagram

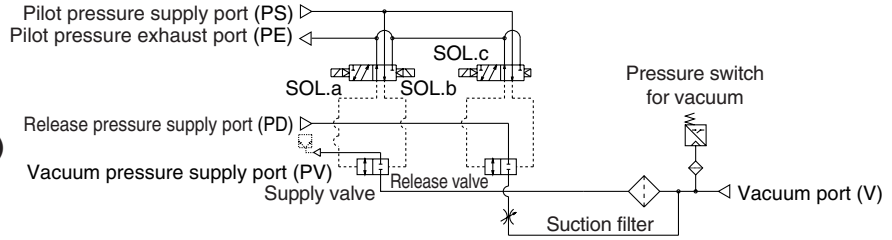



Type K1

Vacuum valve: Double SOL.



Release valve: Single SOL. (N.C.)

ZR100-K1□M□□-E□□-□




A : Release flow rate adjusting needle with lock nut

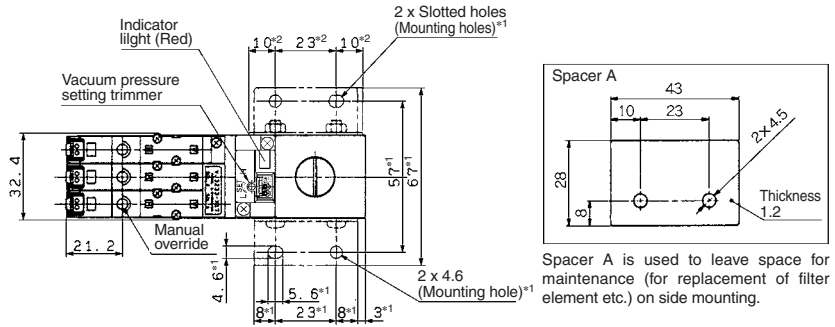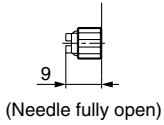

Spacer A is used to leave space for maintenance (for replacement of filter element etc.) on side mounting.

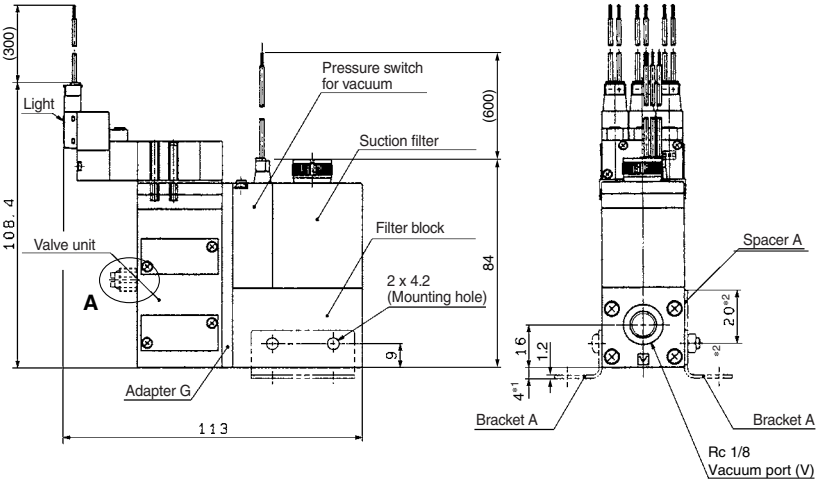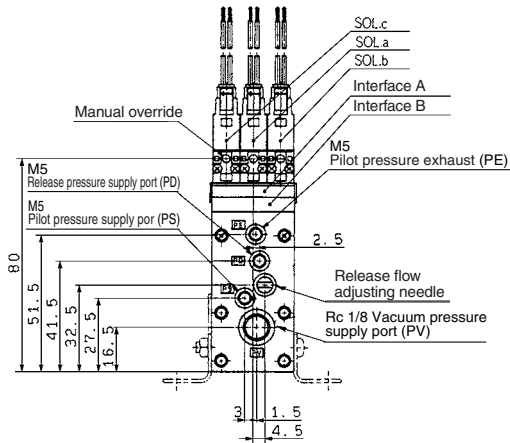

ZR100-K1□M□□-D□□□-□

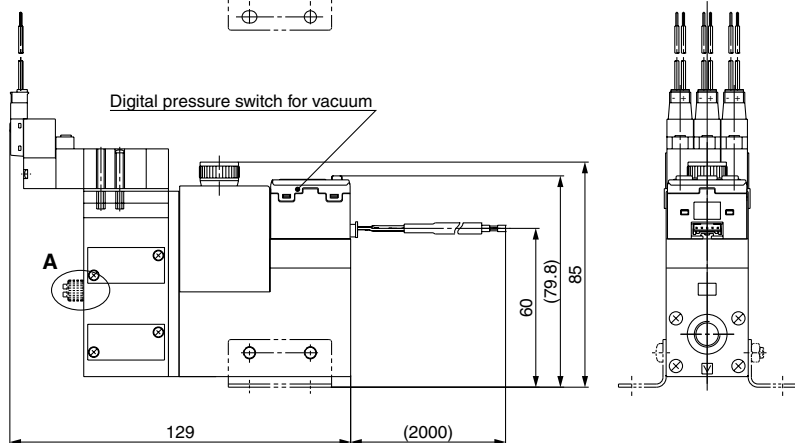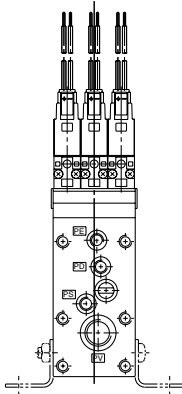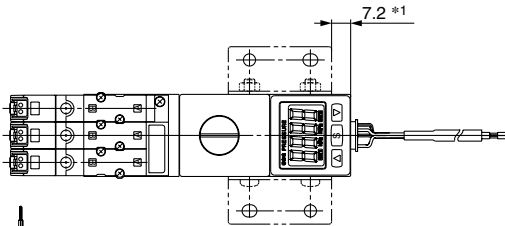


Note) * 1 Dimensions for mounting bracket A
* 2 Dimensions for mounting spacer A
Bracket A part no.: P3270153#1 (Standard accessory) Spacer A part no.: P3270156#1

- ZA
- ZX
- ZR
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

Series ZR





Vacuum Pump System

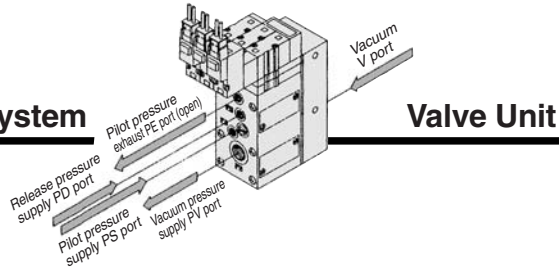

Type K1

ZR1-VK1□M□□-□



Circuit diagram

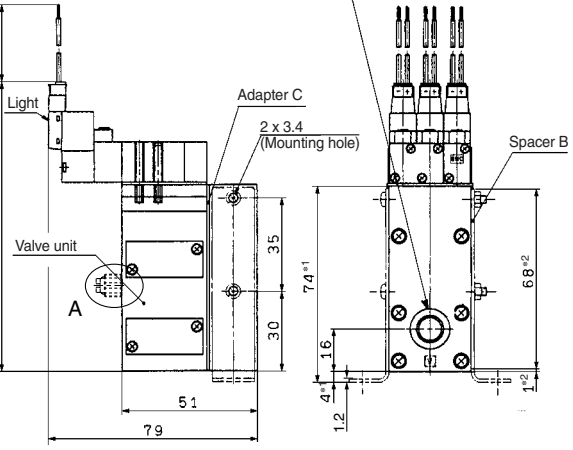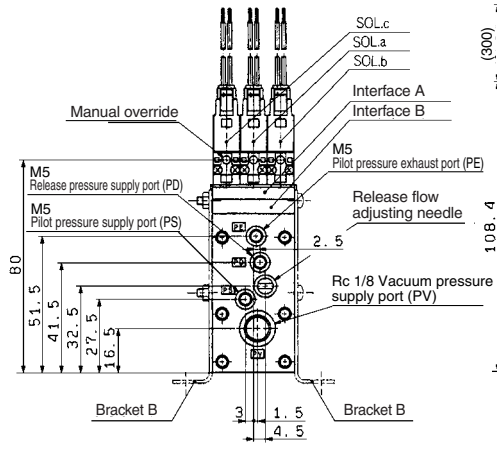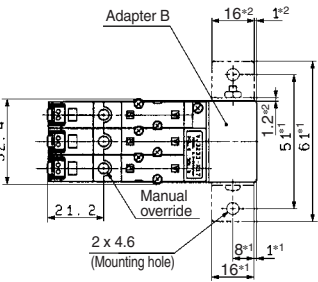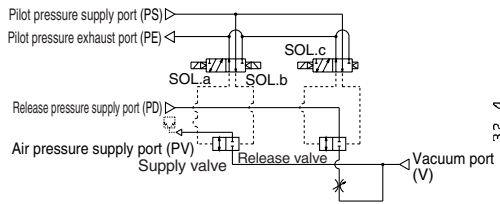

Type K2

ZR1-VK2□M□□-□

Circuit diagram

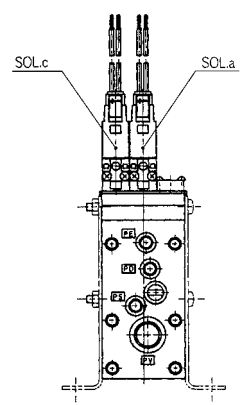
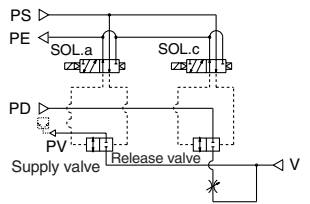


A : Release flow rate adjusting needle with lock nut


Type K3

ZR1-VK3-□

Circuit diagram

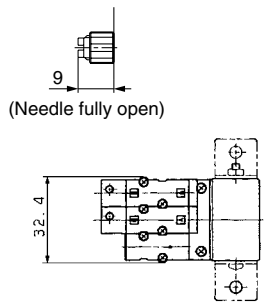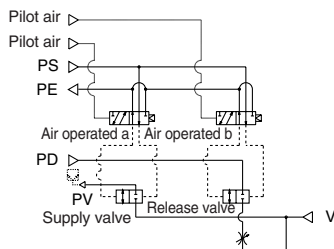


Note) * 1 Dimensions for mounting bracket B
 * 2 Dimensions for mounting spacer B
 Spacer B is used to leave space for maintenance (for replacement of solenoid valve etc.) on side mounting of used on surface mounting.
 Bracket B part no. : P3270154#1 (Standard accessory)
 Spacer B part no. : P3270157#1

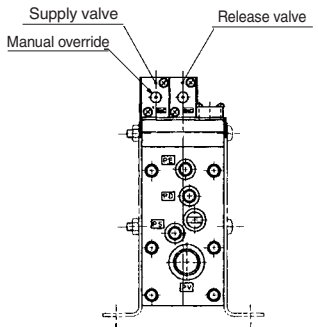

★ Dimensions not indicated are identical to type K2.

Vacuum Pump System




Valve Unit

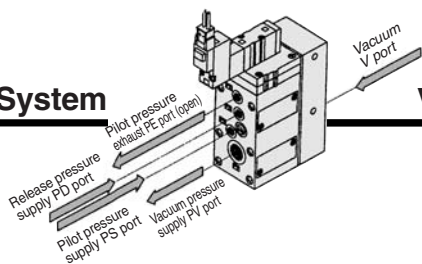


Type C1

ZR1-VC1 □ M □ □ - □

Circuit diagram

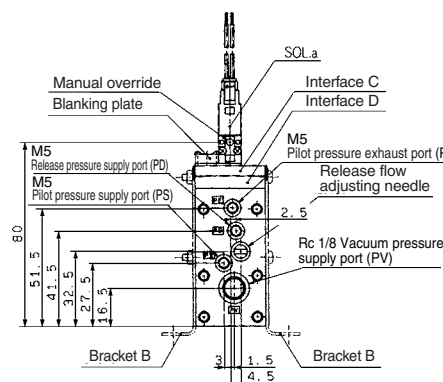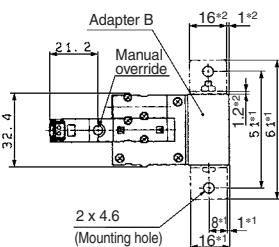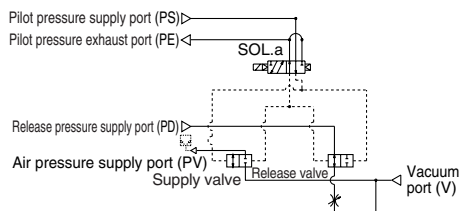

A : Release flow rate adjusting needle with lock nut






Note) * 1 Dimensions for mounting bracket B
* 2 Dimensions for mounting spacer B
Spacer B is used to leave space for maintenance (for replacement of solenoid valve etc.) on side mounting of used on surface mounting.
Bracket B part no.: P3270154#1 (Standard accessory)
Spacer B part no.: P3270157#1

Type C2

ZR1-VC2 - □

Circuit diagram

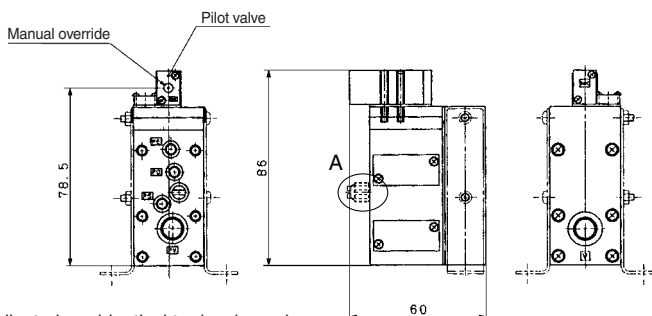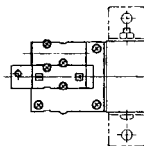
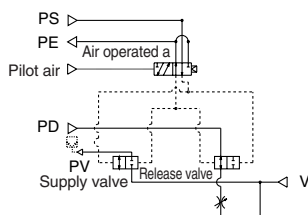


★ Dimensions not indicated are identical to drawings above.

Type C3

ZR1-VC3 □ M □ □ - □



Circuit diagram

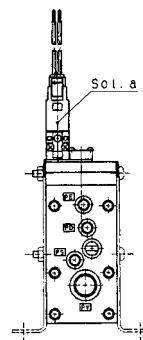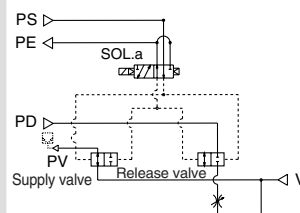

Type C4

ZR1-VC4 □ M □ □ - □

Circuit diagram

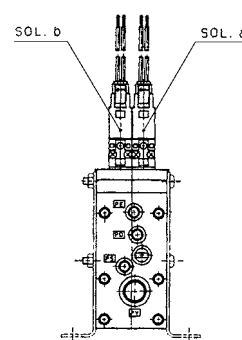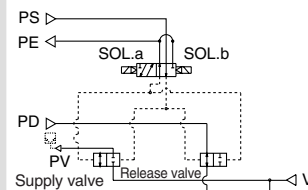

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY □

ZF □

ZP □

SP

ZCUK

AMJ

AMV

AEP

HEP

Related Equipment

Manifold Specifications/Vacuum Pump System



Specifications

Max. number of units	6 stations
Port	Port size
Common vacuum pressure supply port (PV)	1/8 (Rc, NPTF, G)
Common pilot pressure supply port (PS)	M5
Common release pressure supply port (PD)	M5
Common exhaust port (EXH)	1/2 (Rc, NPTF, G)
Mass	Basic mass for one station is 0.275 kg. Additional mass per one station is 0.12 kg.

Note) When using 3 or more stations with ZR100 manifold, utilize PV port as suction on both sides.

Manifold Vacuum/Air Supply

Supply port location	Manifold Port					
	Left			Right		
	PV	PS	PD	PV	PS	PD
L (Left side)	☉	○	○	●	●	●
R (Right side)	●	●	●	☉	○	○
B (Both sides)	☉	○	○	☉	○	○

Vacuum supply to ☉ PV port.

Air supply to ○ port.

BLANK plug attached to ● port.

Note) BLANK plug is attached on all ports of valve unit.

Individual Spacer

Part no.	Port	Function
ZR1-R1	PV	Possible to set the external vacuum pressure individually
	PS	Possible to set the pilot valve air supply pressure individually
	PD	Possible to set the release valve supply pressure individually
	PE	Possible to set the pilot valve exhaust individually

Individual spacer is used when the connecting port of each unit is not common for the manifold connecting port. Mixed specifications of common and individual unit connecting ports for each unit is possible on manifolds with this individual spacer.

How to Order Manifold

<Manifold base>

ZZR1 06 - [] []

Stations	
01	1
⋮	⋮
06	6

Port location	
R	Right side
L	Left side
B	Both sides

* Viewed from the front side of valve unit, confirm the port location on the right and/or left side.

Thread type	
Nil	Rc
F	G (Note)
T	NPTF

Note) The thread ridge shape is compatible with the G thread standard (JIS B 0203), but other shapes are not conforming to ISO16030 and ISO1179.

Example 1)

- ZZR106-R 1 pc. (Manifold base only)
- *ZR100-K15MZ-EC 5 pcs. (Unit)
- *ZR1-BM1 1 pc. (Blank plate)
- *ZR1-R1-3 1 pc. (Individual spacer)

● With reference from valve side, the third station from right side

Caution when ordering manifold

- The asterisk denotes the symbol for assembly. Prefix it to the ejector part numbers to be mounted.
- When it is not added, the manifold base and ejector are shipped separately.

<Function plate>

ZR1 - RV3 - 1

Arrangement (Right valve station which is looked from valve side is first station.)

1	1 station only
⋮	⋮
6	6 stations only
A	All stations

* When the spacers are attached to the specified locations, specify all spacers.

Example 2) Attached to the first and third stations

- *ZR1-RV3-1
- *ZR1-RV3-3
- *ZR1-RV3-A...2

↑
Fill the number

<Individual spacer>

ZR1 - R1 - 1

⋮
R16

Refer to (About individual spacer.)

Arrangement (Right valve station which is looked from valve side is first station.)

1	1 station only
⋮	⋮
6	6 stations only
A	All stations

* When the spacers are attached to the specified locations, specify all spacers.

Example 3) Attached to the first and third stations

- *ZR1-R1-1
- *ZR1-R1-3

<Blanking plate>

ZR1 - BM1

Refer to Example 1).


About individual spacers

- Manifold supply or valve unit supply can be selectable for each port. In the right table, ports with the symbol ↑ mean that they are manifold supply, while others are individual supply from the valve unit.
- Symbols in the right table are printed on the surface of individual spacers.

Part no.	Symbol	Part no.	Symbol
ZR1-R1	R1	ZR1-R9	R9 ↑PV
-R2	R2 ↑PE	-R10	R10 ↑PV ↑PE
-R3	R3 ↑PD	-R11	R11 ↑PV ↑PD
-R4	R4 ↑PD ↑PE	-R12	R12 ↑PV ↑PD ↑PE
-R5	R5 ↑PS	-R13	R13 ↑PV ↑PS
-R6	R6 ↑PS ↑PE	-R14	R14 ↑PV ↑PS ↑PE
-R7	R7 ↑PS ↑PD	-R15	R15 ↑PV ↑PS ↑PD
-R8	R8 ↑PS ↑PD ↑PE	-R16	R16 ↑PV ↑PS ↑PD ↑PE


Manifold/System Circuit Example

When not using individual spacer

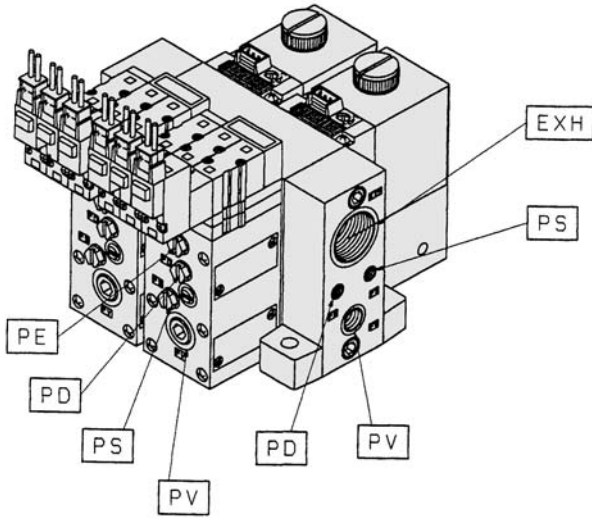


PV: Vacuum pressure supply port
PS: Pilot pressure supply port
PD: Release pressure supply port
PE: Pilot pressure exhaust port
EXH: Common exhaust port
V: Vacuum Port

When using individual spacer

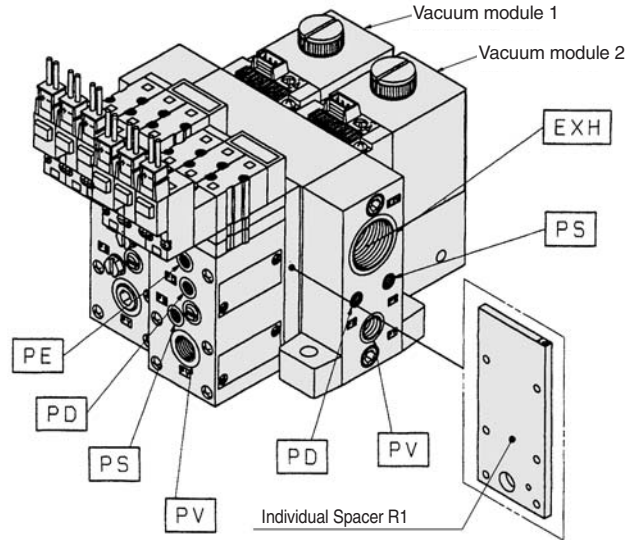


PV: Vacuum pressure supply port
PS: Pilot pressure supply port
PD: Release pressure supply port
PE: Pilot pressure exhaust port
EXH: Common exhaust port
V: Vacuum Port

<System circuit example>

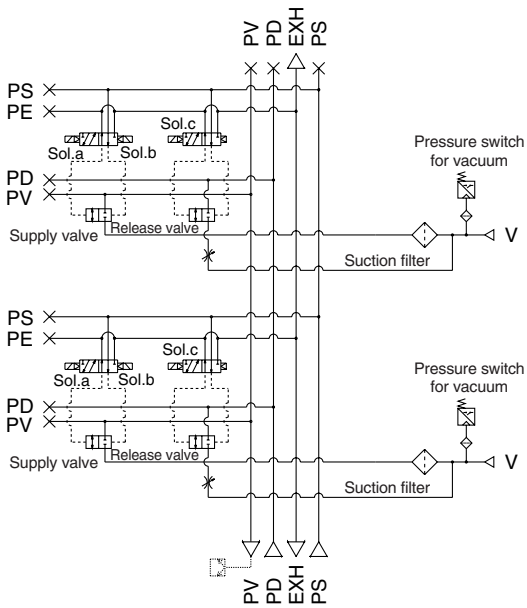


<System circuit example>

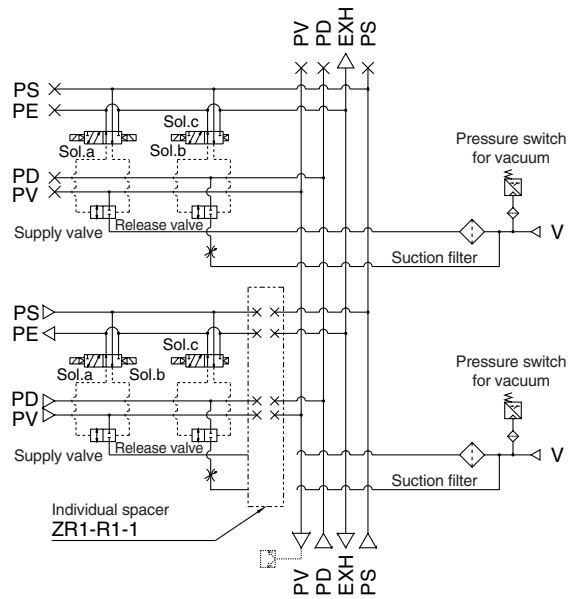




ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

Series ZR

Vacuum Pump System

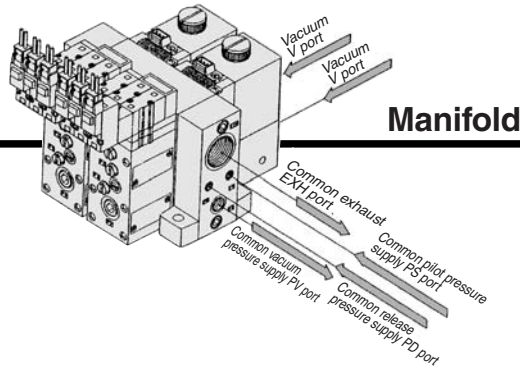



A : Release flow rate adjusting needle with lock nut

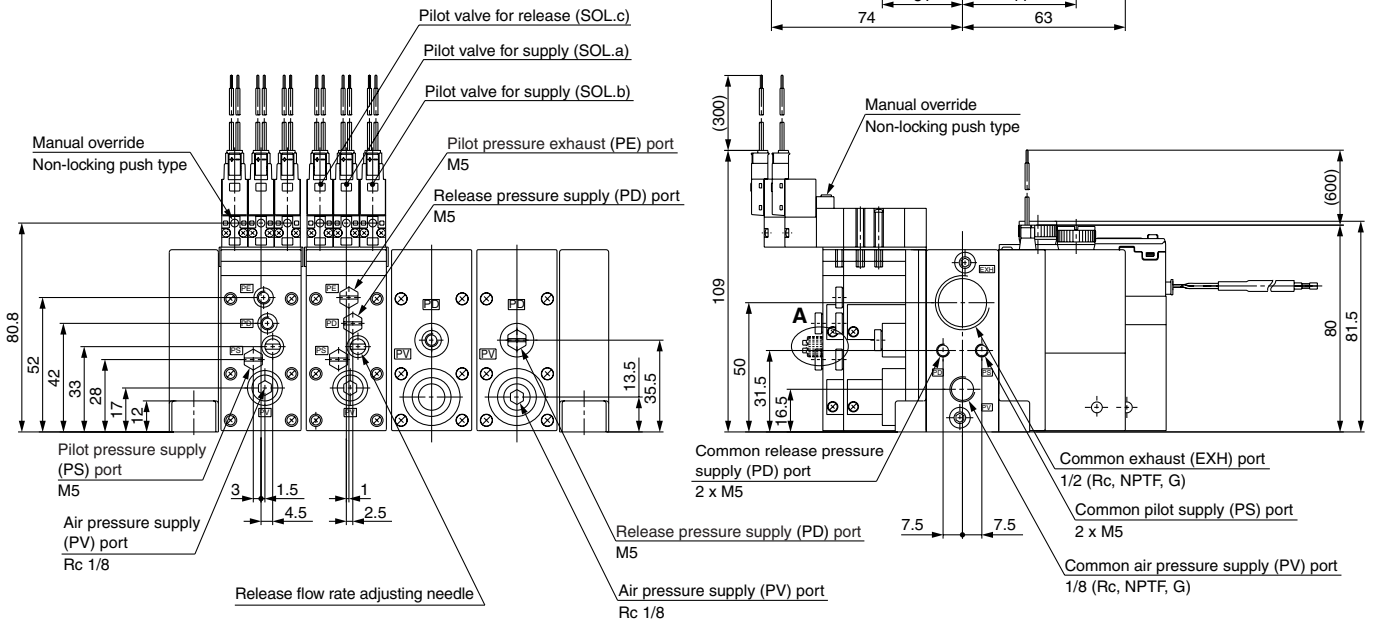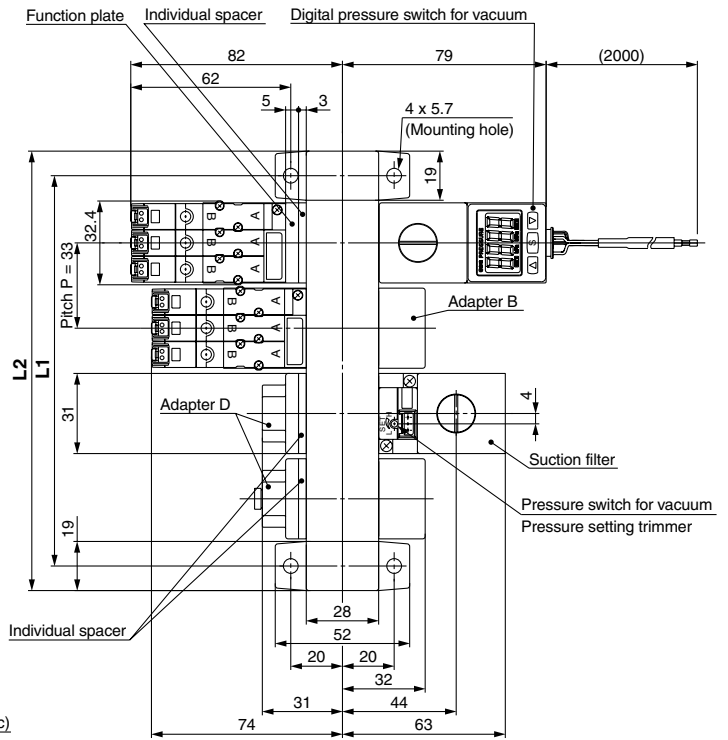

* 1 The common exhaust port (EXH.) is also used as the pilot pressure exhaust (PE) port of the pilot valve. Use while the port is open to the atmosphere.

		(mm)					
Symbol	Stations	1	2	3	4	5	6
L1		52	85	118	151	184	217
L2		71	104	137	170	203	236

Circuit diagram

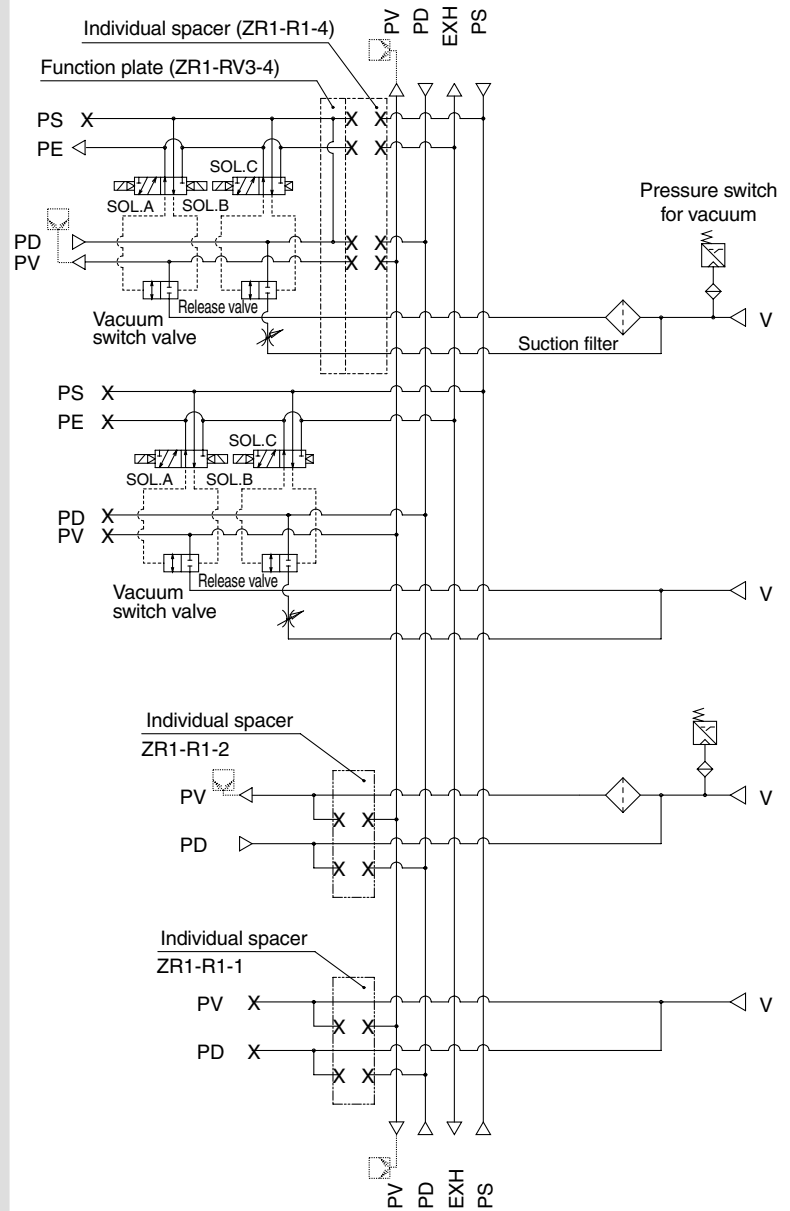
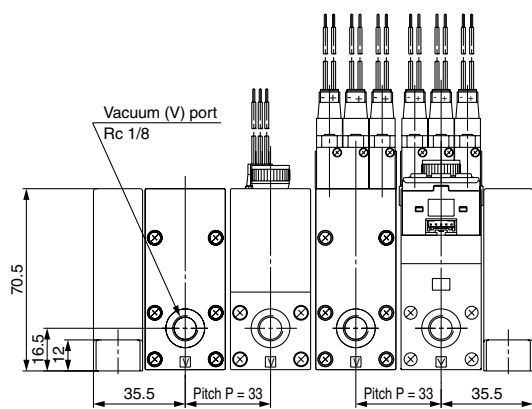


ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment



PV : Vacuum pressure supply port
PS : Common pilot pressure supply port
PD : Common release pressure supply port
PE : Pilot valve exhaust port
EXH : Common exhaust port
V : Vacuum Port

Ejector System Mounting Thread Parts List for Unit Combination



Manifold Specifications	Without Manifold
Components	Valve unit + Ejector unit + Pressure switch for vacuum/Filter unit

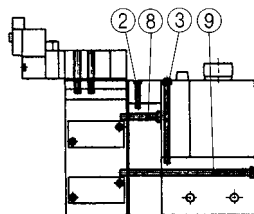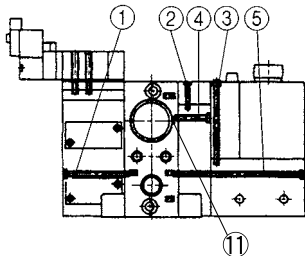




Components	Valve unit + Ejector unit
------------	---------------------------

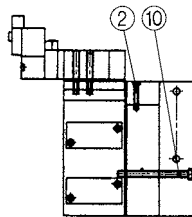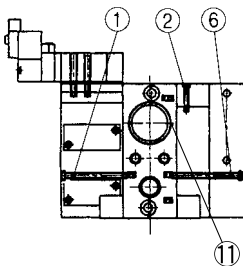

Components	Ejector unit + Pressure switch for vacuum/Filter unit
------------	---

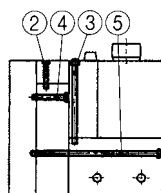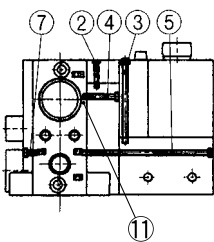

Components	Ejector unit
------------	--------------

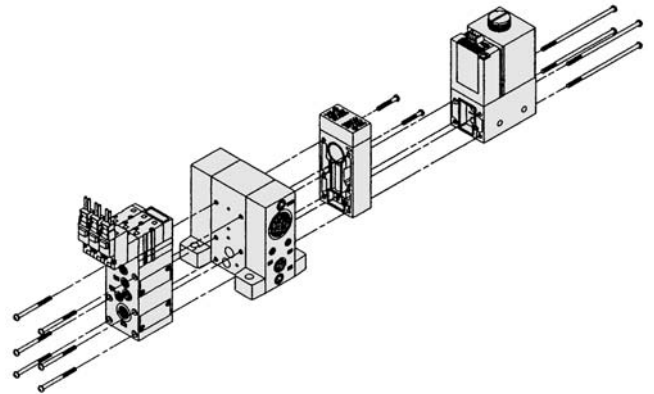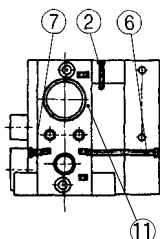

Mounting Thread Parts List for Unit Combination

No.	Combination specifications	Mounting thread	Quantity
1	Standard (without options)	M2.5 x 0.45 x 33	6
	With individual spacer	M2.5 x 0.45 x 37	6
	With function plate	M2.5 x 0.45 x 38	6
2	With individual spacer + with function plate	M2.5 x 0.45 x 41	6
	Individual, common and port exhaust style for nozzle size 10, 13	M2 x 0.4 x 13	2
3	Common and port exhaust style for nozzle size 15	M2 x 0.4 x 23	2
	Individual exhaust style for nozzle size 15	M2 x 0.4 x 23	2
4	Common and port exhaust style for nozzle size 18, 20	M2 x 0.4 x 48	2
	Individual exhaust style for nozzle size 18, 20	M2 x 0.4 x 53	2
5	For vacuum switch and adapter A	M2.5 x 0.45 x 41	2
	For nozzle size 10, 13, 15	M2.5 x 0.45 x 17	2
6	For nozzle size 18, 20	M2.5 x 0.45 x 21	2
	For nozzle size 10, 13, 15	M2.5 x 0.45 x 66	4
	For nozzle size 18, 20	M2.5 x 0.45 x 70	4
7	For nozzle size 10, 13, 15 [For ZSE30A spec.]	M2.5 x 0.45 x 82	4
	For nozzle size 18, 20 [For ZSE30A spec.]	M2.5 x 0.45 x 86	4
8	For nozzle size 10, 13, 15	M2.5 x 0.45 x 35	6
	For nozzle size 18, 20	M2.5 x 0.45 x 39	6
9	Standard (without options)	M2.5 x 0.45 x 5	6
	With individual spacer	M2.5 x 0.45 x 8	6
	For nozzle size 10, 13, 15	M3 x 0.35 x 19	2
	For nozzle size 18, 20	M3 x 0.35 x 23	2
	For nozzle size 10, 13, 15 + with function plate	M3 x 0.35 x 24	2
	For nozzle size 18, 20 + with function plate	M3 x 0.35 x 28	2
	For nozzle size 10, 13, 15	M3 x 0.35 x 68	4
	For nozzle size 18, 20	M3 x 0.35 x 72	4
	For nozzle size 10, 13, 15 + with function plate	M3 x 0.35 x 73	4
	For nozzle size 18, 20 + with function plate	M3 x 0.35 x 77	4
10	For nozzle size 10, 13, 15 [For ZSE30A spec.]	M3 x 0.35 x 84	4
	For nozzle size 18, 20 [For ZSE30A spec.]	M3 x 0.35 x 88	4
	For nozzle size 10, 13, 15 + with function plate [For ZSE30A spec.]	M3 x 0.35 x 89	4
	For nozzle size 18, 20 + with function plate [For ZSE30A spec.]	M3 x 0.35 x 93	4
11	For nozzle size 10, 13, 15	M3 x 0.35 x 37	6
	For nozzle size 18, 20	M3 x 0.35 x 41	6
	For nozzle size 10, 13, 15 + with function plate	M3 x 0.35 x 42	6
Note 1)	When the ejector is compatible with silencer exhaust or port exhaust	M12 x 12	1
	When the ejector is compatible with common exhaust	Unnecessary	—

Note 1) • Screw M12 x 12 screws (Hexagon socket head set screws) in until the head aligns with the manifold base surface.

• The manifold base not assembled with the unit does not include M12 x 12 screws (Hexagon socket head set screws). Please order them separately.

Note 2) When the valve unit is assembled from a single unit function to a manifold function, 3 pcs. of M-5P for PS, PD, PE ports and 1 pc. of R1/8 for PV port are required.

⚠ Precautions

- Be sure to read before handling.
- Refer to front matters 38 and 39 for Safety Instructions and pages 844 to 846 for Vacuum Equipment Precautions.



⚠ Caution

Refer to the Vacuum Equipment Model Selection on page 825 for precautions on matching with vacuum circuit.



Vacuum Pump System Mounting Thread Parts List for Unit Combination

Manifold Specifications Without Manifold




Components	Valve unit + Pressure switch for vacuum / Filter unit
------------	---

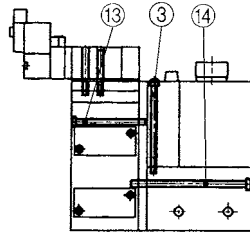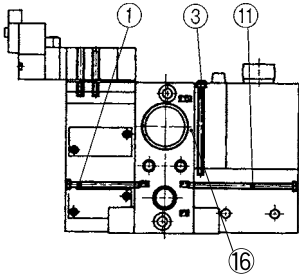

Components	Valve unit
------------	------------

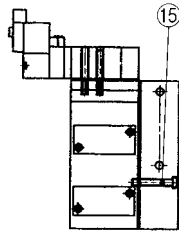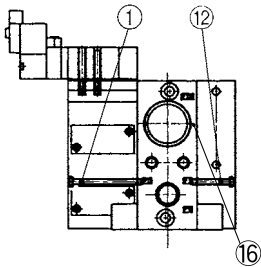

Components	Pressure switch for vacuum / Filter unit
------------	--

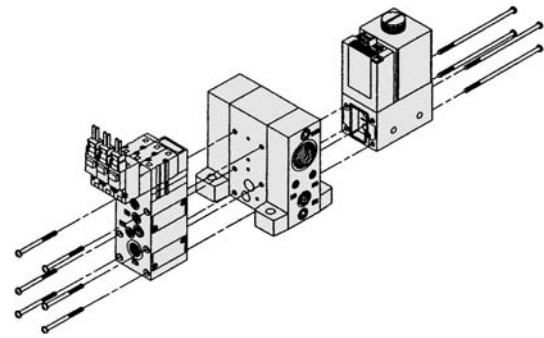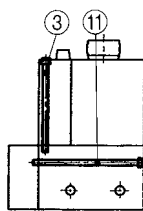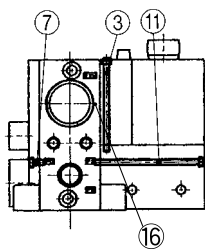

Mounting Thread Parts List for Unit Combination

No.	Combination specifications	Mounting thread	Quantity
1	Standard (Without options)	M2.5 x 0.45 x 33	6
	With individual spacer	M2.5 x 0.45 x 37	6
	With function plate	M2.5 x 0.45 x 38	6
	With individual spacer + with function plate	M2.5 x 0.45 x 41	6
3	For vacuum switch and adapter A	M2.5 x 0.45 x 41	2
7	Standard (Without options)	M2.5 x 0.45 x 5	6
	With individual spacer	M2.5 x 0.45 x 8	6
11	Standard (Without options)	M2.5 x 0.45 x 49	4
	Standard (Without options) [For ZSE30A spec.]	M2.5 x 0.45 x 65	4
12	Standard (Without options)	M2.5 x 0.45 x 18	6
13	Standard (Without options)	M2.5 x 0.45 x 33	2
	With function plate	M2.5 x 0.45 x 38	2
	Standard (Without options)	M3 x 0.35 x 54	4
14	With function plate	M3 x 0.35 x 59	4
	Standard (Without options) [For ZSE30A spec.]	M3 x 0.35 x 70	4
	With function plate [For ZSE30A spec.]	M3 x 0.35 x 75	4
15	Standard (Without options)	M3 x 0.35 x 19	6
	With function plate	M3 x 0.35 x 24	6
16 ^{Note 1)}	Standard	M12 x 12	1

Note 1) • Screw M12 x 12 screws (Hexagon socket head set screws) in until the head aligns with the manifold base surface.
• The manifold base not assembled with the unit does not include M12 x 12 screws (Hexagon socket head set screws). Please order them separately.

Note 2) When the valve unit is assembled from a single unit function to a manifold function, 3 pcs. of M-5P for PS, PD, PE ports and 1 pc. of R1/8 for PV port are required.

- ZA
- ZX
- ZR**
- ZM
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment